

Installation Guide

Model T17

Ultrasonic Flow Transducer



Model T17

Ultrasonic Flow Transducer

Installation Guide

PANA048C21 Rev. G

Jul 2026

panametrics.com

Copyright 2026 by Panametrics LLC. ALL RIGHTS RESERVED. This material contains one or more registered trademarks of Panametrics LLC and/or its subsidiaries. All third-party products and company names are trademarks of their respective holders.

[no content intended for this page]

Services



Panametrics provides customers with an experienced staff of customer support personnel ready to respond to technical inquiries, as well as other remote and on-site support needs. To complement our broad portfolio of industry-leading solutions, we offer several types of flexible and scalable support services including: Training, Product Repairs, Service Agreements and more.

Please visit <https://panametrics.com/services> for more details.

Typographical Conventions

Note: These paragraphs provide information that provides a deeper understanding of the situation, but is not essential to the proper completion of the instructions.

IMPORTANT: These paragraphs provide information that emphasizes instructions that are essential to proper setup of the equipment. Failure to follow these instructions carefully may cause unreliable performance.



CAUTION! This symbol indicates a risk of minor personal injury and/or damage to the equipment unless these instructions are followed carefully.



WARNING! This symbol indicates a risk of serious personal injury unless these instructions are followed carefully.

Safety Issues



WARNING! It is the responsibility of the user to follow all site rules and applicable regulatory requirements.



IMPORTANT Any instructions on grounding and cable termination in this manual are necessary for compliance with global EMC / RFI standards. Such compliance may be required by National EMC / RFI legislation.

Local Safety Standards

The user shall ensure that he operates the equipment in accordance with the applicable local codes, standards, regulations, or laws.

Qualification of Personnel

Ensure that all personnel have applicable training to use the equipment.

Personal Safety Equipment

Ensure that operators and maintenance personnel have all safety equipment applicable.


Unauthorized Operation

Ensure that unauthorized personnel cannot gain access to the operation of the equipment.

Environmental Compliance

Waste Electrical and Electronic Equipment

This apparatus required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment. To avoid the dispersal of these substances into our environment and to reduce the pressure on natural resources, we encourage you to use an appropriate “take-back” resource recovery scheme. These schemes will reuse or recycle most of the materials of your end-of-life equipment in an environmentally responsible way. The crossed-out wheeled bin symbol marked on the product invites you to use such a scheme.

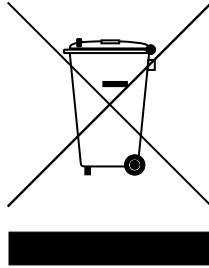

If you need more information on the collection, reuse and recycling systems, please contact your local waste management administration.

As part of its commitment to the environment and the EU's WEEE Directive 2012/19/EU, Panametrics participates in a take-back scheme.

Please visit <https://panametrics.com/health-safety-and-environment-hse> for take-back instructions and more information about this initiative.

Chapter 1. Introduction

1.1	Overview	1
1.2	Transducer Construction	1

Chapter 2. Installing Pipe Nozzles

2.1	Introduction	3
2.2	Diametrical Path Nozzle Installation	5
2.2.1	Identifying and Checking the Nozzle Installation Kit Components, Diametrical	6
2.2.2	Selecting and Marking the First Nozzle Location, Diametrical	7
2.2.3	Determining and Marking the Second Nozzle Location, Diametrical	8
2.2.4	Installing the First Welding Boss, Diametrical	11
2.2.5	Installing the First Nozzle, Diametrical	13
2.2.6	Installing the Second Welding Boss and Nozzle, Diametrical	15
2.2.7	Hot Tapping the Pipe	16
2.2.8	Cold Tapping the Pipe	16
2.3	Non-Diametrical Mid Radius Path Nozzle Installation	16
2.3.1	Identifying and Checking the Nozzle Installation Kit Components, Non-Diametrical, Mid-Radius	17
2.3.2	Selecting and Marking the First Nozzle Location, Non-Diametrical, Mid-Radius	18
2.3.3	Determining and Marking the Second Nozzle Location, Non-Diametrical, Mid-Radius	21
2.3.4	Installing the First Welding Boss, Non-Diametrical, Mid-Radius	24
2.3.5	Installing the First Nozzle, Non-Diametrical Mid Radius	27
2.3.6	Installing the Second Welding Boss and Nozzle, Non-Diametrical Mid Radius	28
2.3.7	Hot Tapping the Pipe	29
2.3.8	Cold Tapping the Pipe	29

Chapter 3. Installing an Isolation Valve

3.1	Diametrical or Non-Diametrical Nozzle, Valve Installation	31
3.1.1	For 3 inch Flanges	31

Chapter 4. Inserting T17 Transducers into the Pipe

4.1	Introduction	33
4.2	Inserting Transducers Using the Insertion Mechanism	33
4.2.1	Preparing for Installation	33
4.2.2	Mounting the Insertion Mechanism	34
4.2.3	Aligning the Downstream Transducer for Extended Range Installations	41
4.3	Connecting an XAMP	44

Chapter 5. Maintaining the T17 Transducers

5.1	Removing Transducers	49
5.1.1	Using the Insertion Mechanism	49

Chapter 6. Specifications

6.1	T17 Transducer Physical Specifications	53
6.2	T17 Transducer Certifications	53
6.3	Special Conditions of Use	53

[no content intended for this page]

Chapter 1. Introduction

1.1 Overview

The T17 ultrasonic flow transducer is used exclusively with the Panametrics line of ultrasonic flowmeters. These transducers measure the flow rate of sonically-conductive gases through pipes having diameters between 12 in. (305 mm) and 120 in. (3000 mm). This manual provides details on the following topics:

- Transducer construction
- Nozzle installation
- Transducer installation
- Maintenance
- Specifications

Note: For installation on pipes ranging from 4 to 12 in. (100 to 300 mm), or for using the BIAS 90° configuration, please see the Panametrics 916-117 Installation Guide.

1.2 Transducer Construction

Each T17 transducer assembly (see Figure 1 below) consists of the following components:

- A fully sealed, welded, all metal body made from grade 2 titanium as standard
- A transducer head that consists of piezoelectric elements wired to the BNC connector
- A BNC style connector for use in connecting the transducer to the flowmeter

The T17 transducer is available in standard lengths of 33 in. (840 mm) to 60 in. (1500 mm) and with either a 180° or 174° angled head.

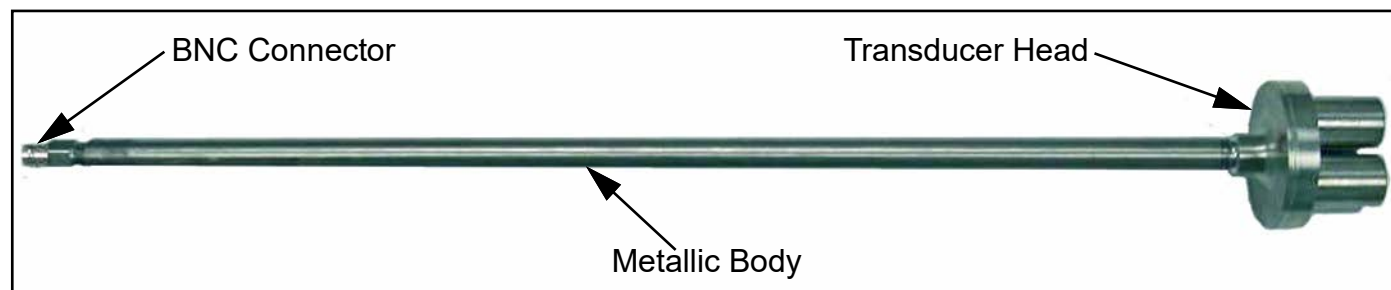


Figure 1: General T17 Transducer (180° Head)

[no content intended for this page]

Chapter 2. Installing Pipe Nozzles

2.1 Introduction

Before the T17 transducers can be installed into the pipe, you will need to install pipe nozzles. Nozzles may be installed as part of a fabricated spoolpiece, or by using the hot or cold process with a *Panametrics Nozzle Installation Kit*.

IMPORTANT: This procedure only applies if you are using a Nozzle Installation Kit. If you are tapping the pipe without using a Nozzle Installation Kit, refer to the supplied drawings in your shipment. This procedure is written and illustrated for installations on horizontal pipes. However, the procedure is the same for vertical pipe installations.



WARNING! Please follow all applicable site, local, and regional safety measures when conducting tapping of nozzles to pipe. Great care should be taken to ensure activity is not being conducted in a flammable environment without proper mitigation strategies.



WARNING! Any deviation from this prescribed procedure can result in accidental release of process gas that may be dangerous or hazardous due to its pressure, flammability, or composition. Safe work practices should be followed and periodic review of this procedure is highly recommended before conducting this work. conducted in a flammable environment without proper mitigation strategies.

This section describes how to install nozzles in the different available configurations:

- Standard flow range operation of 0.1 to 328 f/s (0.03 to 100 m/s):
This configuration uses two 180° head T17 transducers.
- Extended range operation of 0.1 to 394 f/s (0.03 to 120 m/s):
This configuration uses one 180° head T17 transducer and one 174° head T17 transducer.

Either of these arrangements may be used on one of two path configurations:

- A diametrical path configuration (the signal path forms a line through the pipe diameter (see *Figure 2* below).
- A non-diametrical path configuration (the signal path forms a line offset from the diameter (see *Figure 3* below).

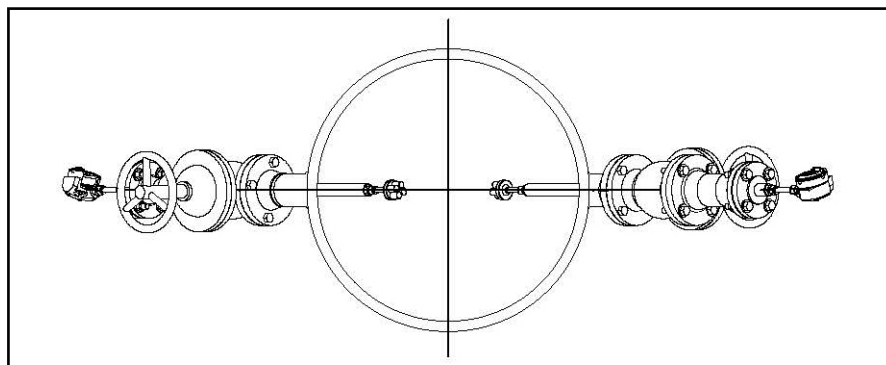


Figure 2: Diametrical Path Configuration

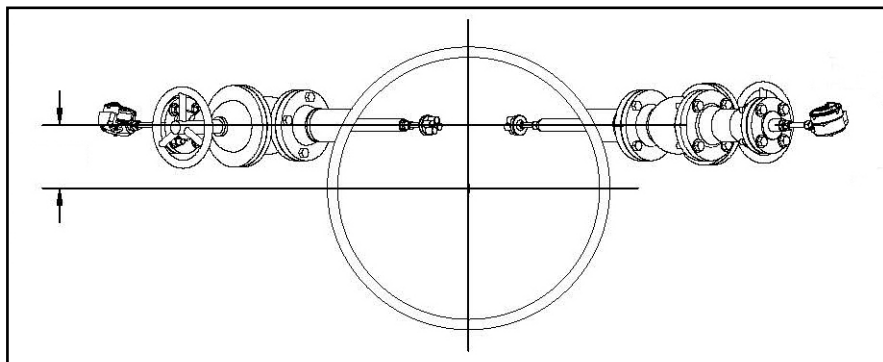


Figure 3: Non-Diametrical Path Configuration

2.2 Diametrical Path Nozzle Installation

This procedure includes the following instructions:

- Identifying and checking the nozzle installation kit components
- Selecting and marking the first nozzle location
- Determining and marking the second nozzle location
- Installing the first welding boss
- Installing the first nozzle
- Installing the second welding boss and nozzle
- Hot tapping the pipe

2.2.1 Identifying and Checking the Nozzle Installation Kit Components, Diametrical

The nozzle kit consists of various components which you must identify and check as described in the following sub-sections.

The *Nozzle Installation Kit* contains the materials listed below. Use *Figure 4* below to help identify each component.

• 2 Nozzles (if purchased)	• 2 Welding bosses	• 1 Jig	• 1 Threaded rod (1 in. diameter), washer and nut
----------------------------	--------------------	---------	---

IMPORTANT: You will need to supply eight 5/8" studs with two nuts each (for 3", 150# flanges), or 3/4" studs with two nuts each (for 3", 300# flanges).


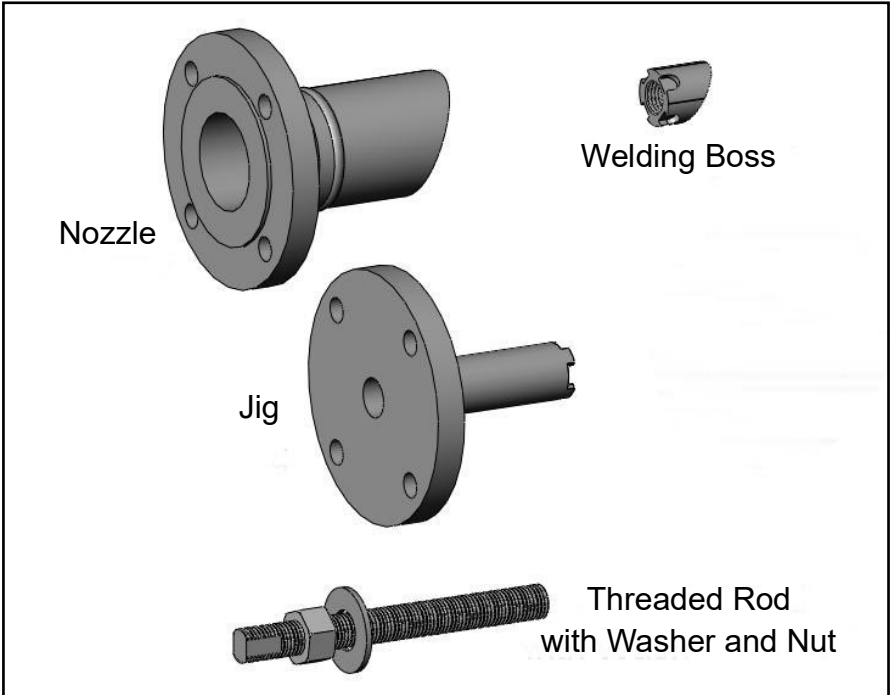


Figure 4: Components in Nozzle Installation Kit

Check the marking on the welding boss. The pipe OD and the mounting angle are engraved on the boss as shown below



2.2.2 Selecting and Marking the First Nozzle Location, Diametrical

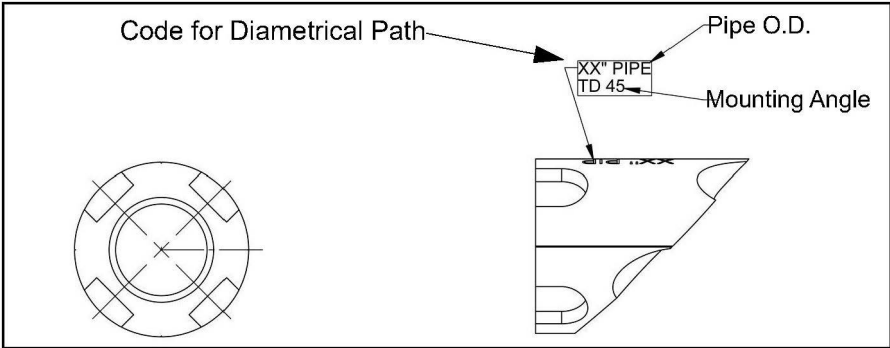


CAUTION!

Correct nozzle alignment is critical to the successful operation of the flowmeter. Therefore, all marking, positioning and welding operations must be carried out with the utmost attention to accuracy. Unless otherwise stated, dimensional positioning of the nozzles must be held to a tolerance of $\pm 1/16$ in. (± 1.6 mm) relative to each other and with respect to the pipe centerline. the angular tolerance must be held to $\pm 1^\circ$.

All hole cutting in process piping must be performed using hot tapping equipment.


1. For optimum performance, you should select a location that has at least 20 pipe diameters of straight, undisturbed flow upstream and 5 pipe diameters of straight, undisturbed flow downstream from the measurement point. Undisturbed flow means avoiding sources of turbulence such as valves, flanges, elbows; avoiding swirl; and avoiding disturbed flow profiles.

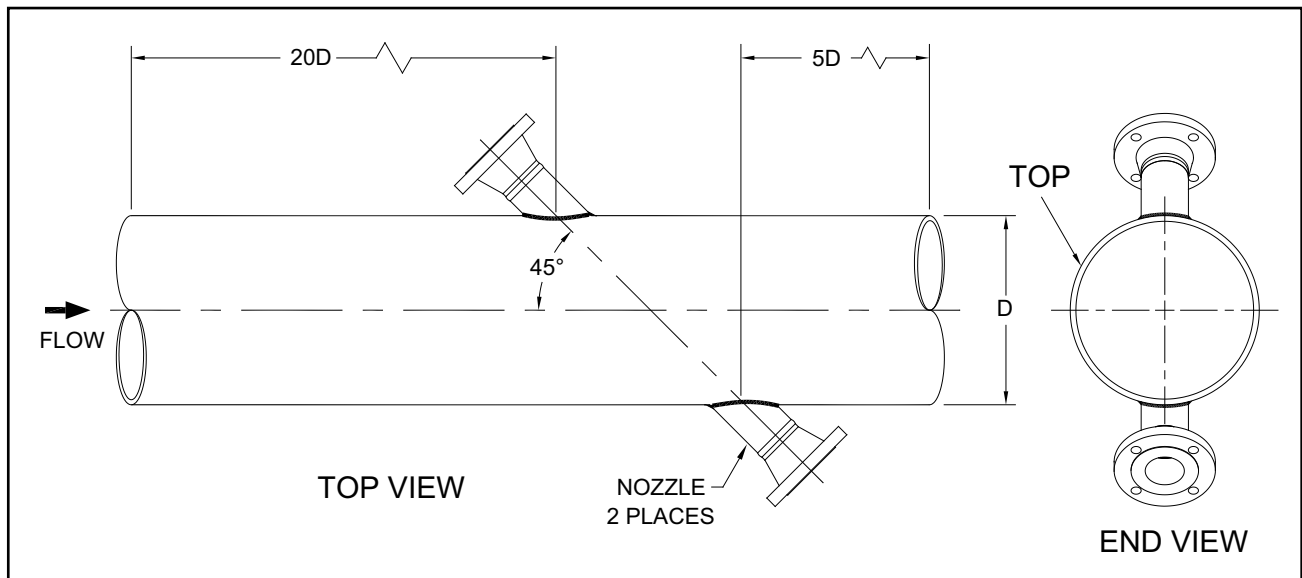


2. We recommend that you install the nozzles on a diameter as near as possible to the horizontal plane (i.e., 3 o'clock and 9 o'clock positions) for horizontal pipe.

Note: If you cannot find a proper location, please consult with Panametrics Flow Application engineering.

3. At the 3 o'clock position, center punch the pipe to mark the position for the center of the first nozzle.

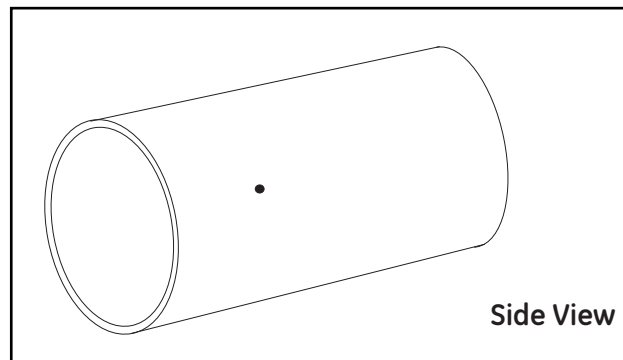


4. Spray this area with a marking dye product. Using a metal edge, scribe 6" long vertical and a horizontal lines that intersect at the center punch mark.

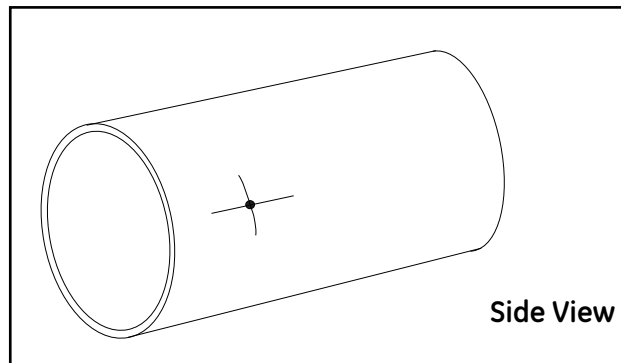

2.2.3 Determining and Marking the Second Nozzle Location, Diametrical


1. The position for the second nozzle is typically a distance equal to one pipe outside diameter along the pipe and located on the opposite side of the pipe (i.e., 180° around). Spray this area with a marking dye product. (For installation other than 45°, the distance is equal to the OD times the tangent of the installation angle.
2. Due to the possible variation in outside diameter of the pipe, measure the outside diameter of the pipe at four location between the nozzle centers. Calculate the average outside diameter based on these measurements.

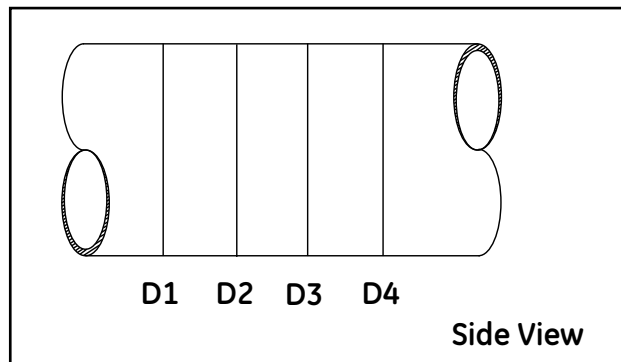


3. Using a roll of polyester film (or equivalent), cut a strip of film with the following width and length:

IMPORTANT: Ensure that the sides of the film are cut parallel to each other.


- Width: equal to the average outside diameter calculated in Step 2 above.
- Length: equal to 4 times the outside diameter of the pipe.

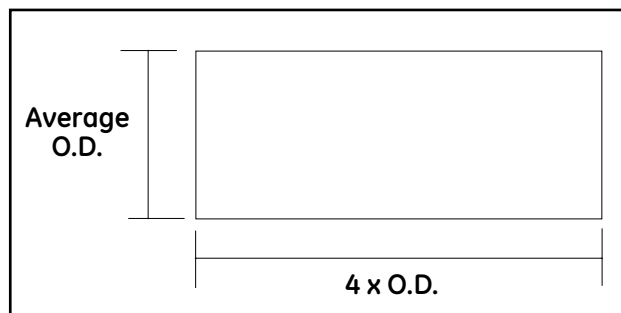


4. Wrap the strip of film around the pipe with one edge running along the vertical scribe line at the first nozzle location. Make sure the strip overlaps squarely around the pipe and mark the overlap position of the strip. This equals the circumference of the pipe.

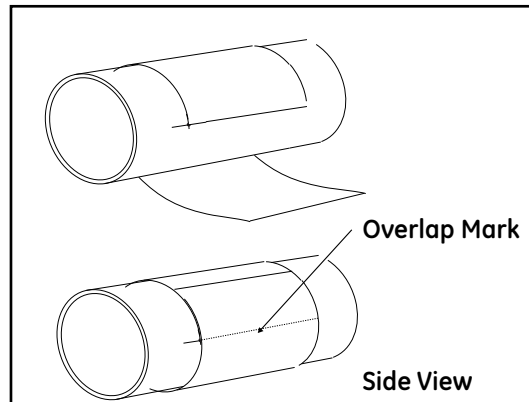


5. Remove the strip of film and fold it as shown below to determine the position which is diametrically opposite the overlap position when the film is reapplied to the pipe.

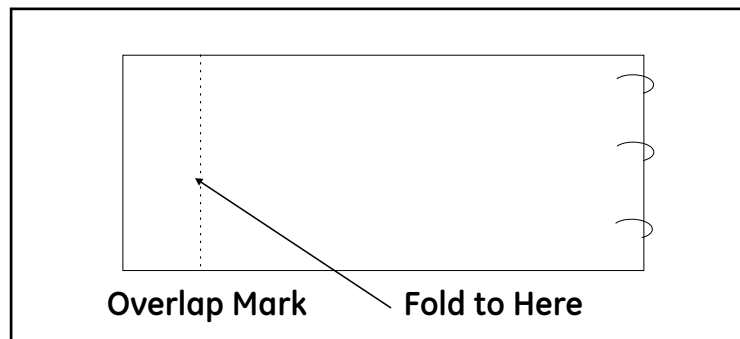


6. Mark the outside of the fold for reference.

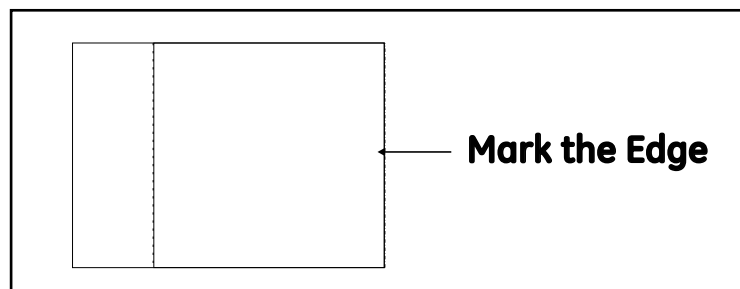


7. Place the strip of film on the pipe again. This time, line up the overlap mark with the horizontal and vertical scribe lines. Again, make sure you wrap the strip of film squarely around the pipe.

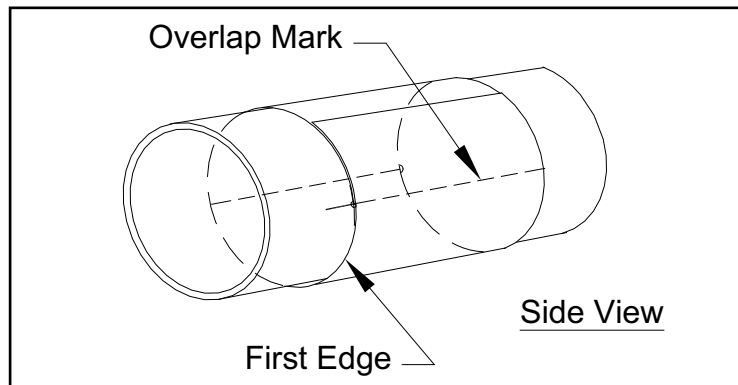

8. The new position of the center of the second nozzle is now identified as the intersection of the fold line and the second edge of the strip of film. Center punch this location prior to removing the strip of film.

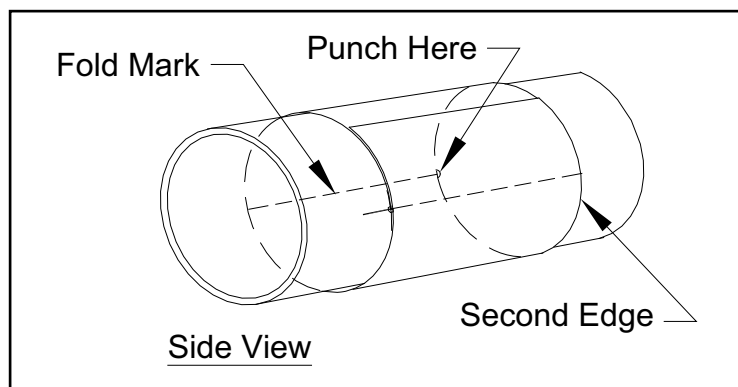

9. Remove the film.
10. Scribe 6" long vertical and horizontal lines that intersect at the center-punch mark.

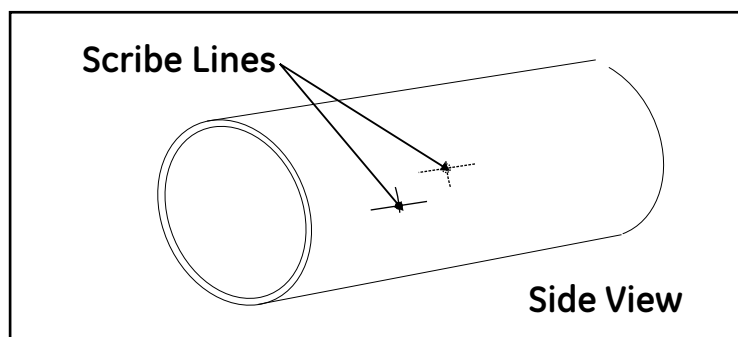

2.2.4 Installing the First Welding Boss, Diametrical

- Before welding the first boss, you must add another scribe line, known as the oblique center line. The oblique center line compensates for the slope or oblique angle of the boss. The oblique center line is offset from the true center (vertical) scribe line marked earlier by a distance of "X," which is dependent on the pipe outside diameter as follows:

$$X = D/2 - \frac{d/2}{\tan[\sin^{-1}(d/D)]}$$

where, D = pipe outside diameter


d = welding boss outside diameter (1.660 in.)

Table 1 below shows values of X for various pipe sizes.


Table 1: X Values for Various Pipe Sizes

Pipe		X Dimensions
NPS (DN)	O.D.	
12 in. (300 mm)	12.75 in.	0.054 in. (1.37 mm)
14 in. (350 mm)	14.00 in.	0.049 in. (1.24 mm)
16 in. (400 mm)	16.00 in.	0.043 in. (1.09 mm)
18 in. (450 mm)	18.00 in.	0.038 in. (0.97 mm)
20 in. (500 mm)	20.00 in.	0.035 in. (0.89 mm)
22 in. (600 mm)	22.00 in.	0.032 in. (0.81 mm)
24 in. (650 mm)	24.00 in.	0.029 in. (0.74 mm)
26 in. (700 mm)	26.00 in.	0.027 in. (0.68 mm)

- Scribe the oblique center line on the pipe at the prescribed distance from the true center line. The oblique center line should be marked on the side of the true center line that is closer to the second nozzle location.

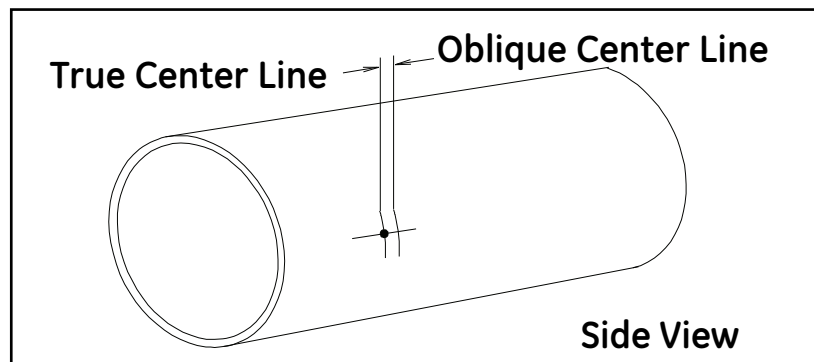

3. Position the welding boss such that the four scribe lines on the welding boss are lined up with the horizontal scribe mark and the oblique center line on the pipe. Make sure you orient the boss as shown below.

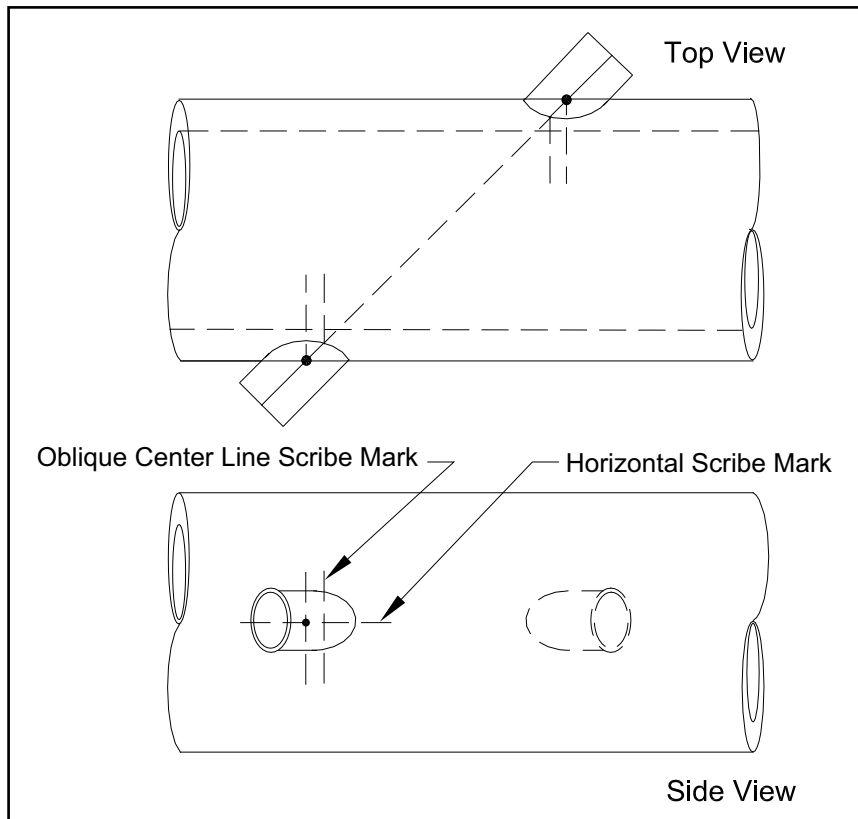


4. Clamp the boss in place using a pipe strap or equivalent so that it cannot move during tack welding.
5. Check the boss alignment, then tack weld the carbon steel boss to the pipe in each of the four grooves between the boss scribe marks.
6. Remove the clamp and check the alignment again. If the boss is misaligned by 0.02 in. (0.5 mm) or more, remove the boss, grind off the welds and reinstall it.


2.2.5 Installing the First Nozzle, Diametrical

IMPORTANT: It is essential that the nozzle is set up and fixed in position using the jig and 1-in. threaded rod provided, prior to welding the nozzle.


1. Screw the threaded rod into boss that is welded onto the pipe. If necessary, remove the washer and nut from the threaded rod.

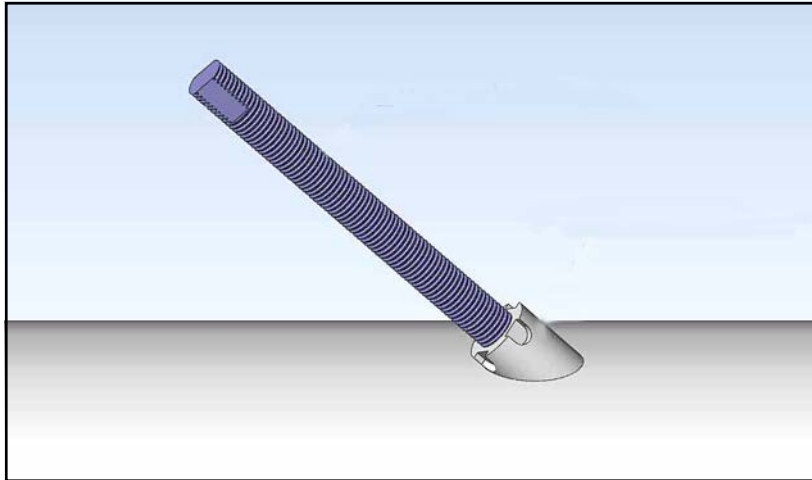

2. Slide the nozzle over the threaded rod, and align the contoured end of the nozzle so it matches the pipe arc. Then slide the jig over the threaded rod, fitting the jig into the welding boss.

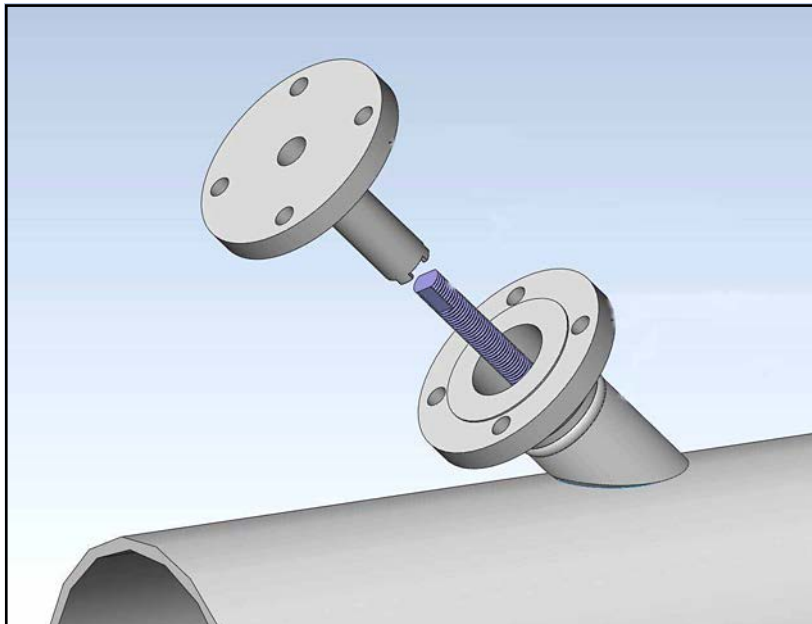

3. Align the jig and nozzle bolt holes and tighten the assembly in place, using the washer and nut.

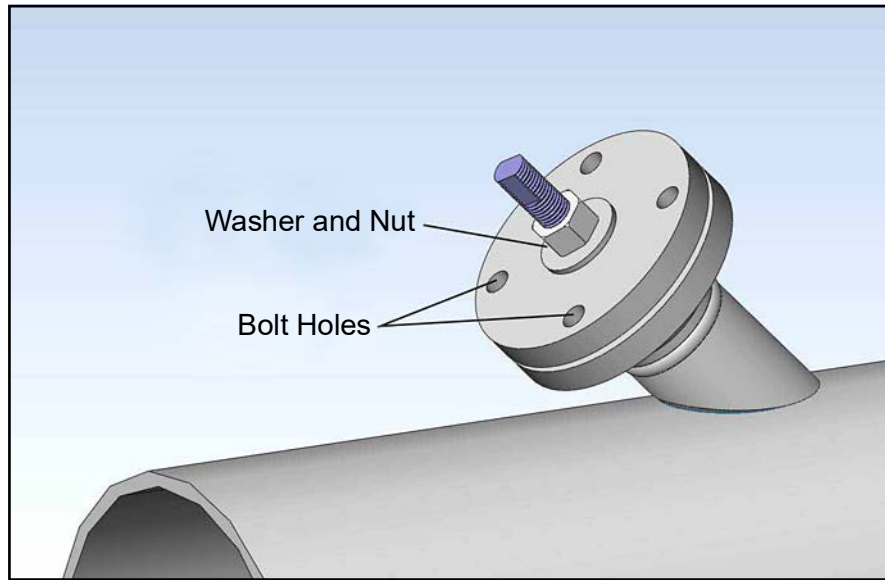

4. Install studs, nuts, and washers in the bolt holes on the flange/jig assembly and tighten the nuts.
5. The jig, boss, and nozzle combination is designed to provide a 0.094 in. (2.4 mm) root gap between the beveled edge of the nozzle and the outside diameter of the pipe. If the 0.094 in. (2.4 mm) clearance does not exist all around, the nozzle must be removed and ground appropriately to provide the required clearance. If the root gap is larger than the 0.094 in. (2.4 mm) dimension, then suitably sized washers may be inserted between the jig and the nozzle to reduce the root gap dimension.




WARNING! Only qualified personnel should weld bosses and nozzles, using a suitable ASME BPVC IX qualified welding procedure.


6. Tack weld the nozzle to the pipe at four diametrically opposed points, each tack being approximately 0.6 in. (15 mm) in length. Allow the welds to cool for 30 seconds between tacks.
7. Proceed to complete the root pass and subsequent filler passes as required.
8. Allow the welds to cool, then remove the threaded rod, washer, nut, and jig.

2.2.6 Installing the Second Welding Boss and Nozzle, Diametrical

Install the second welding boss and nozzle at the required position as described in *"Installing the First Welding Boss, Diametrical"* on Section 2.2.4 and *"Installing the First Nozzle, Diametrical"* on Section 2.2.5.

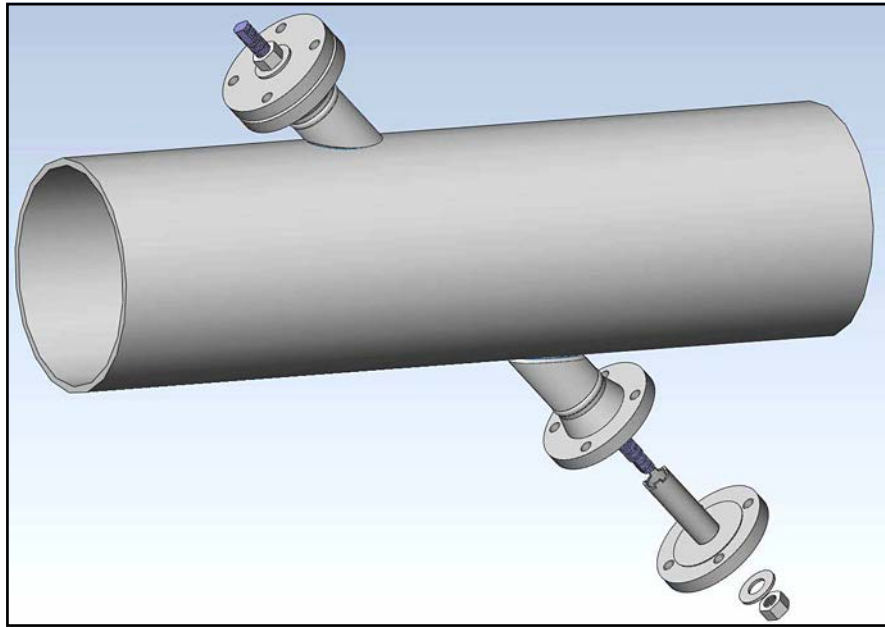

The completed installation should appear as shown below.

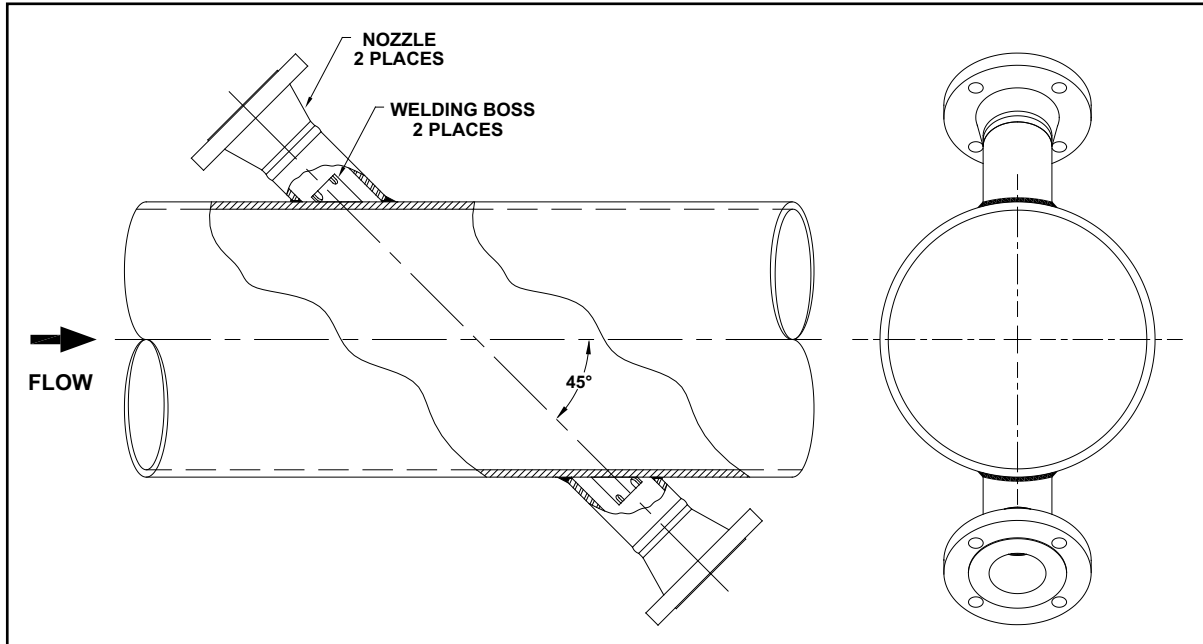

2.2.7 Hot Tapping the Pipe



WARNING! Hot tapping should be performed only by qualified personnel. Follow all applicable code and safety practices during these procedures.

For 3 in. Flanges:

- 1.** Install 3 in. ANSI flanged isolation valves on both nozzles (full bore, 8 in. face to face for 150# RF or 11.125 in. for 300# RF) with a gasket and 5/8 in. (for 150# rated flanges) or 3/4 in. (for 300# rated flanges) diameter studs and nuts. Orient the valve handles to minimize interference.
- 2.** Hot tap holes in the pipe using a hot tap machine equipped with a 3/4 in. (19.05 mm) drill bit. Then use a coupon retaining hole saw to cut a hole with a diameter of 2.50 in. (63.5 mm) minimum.

2.2.8 Cold Tapping the Pipe



WARNING! Cold tapping should be performed only by qualified personnel. Follow all applicable code and safety practices during these procedures.

The procedure for cold tapping a pipe is the same as the hot tapping procedure. However, an isolation valve is not necessary during the process. The hot tapping medium can be applied directly to the nozzle. Isolation valves will be added after the tapping is complete.

2.3 Non-Diametrical Mid Radius Path Nozzle Installation

This procedure includes the following instructions:

- Identifying and checking the nozzle installation kit components
- Selecting and marking the first nozzle location
- Determining and marking the second nozzle location
- Installing the first welding Boss
- Installing the first nozzle
- Installing the second welding boss and nozzle
- Hot tapping the pipe

2.3.1 Identifying and Checking the Nozzle Installation Kit Components, Non-Diametrical, Mid-Radius

The nozzle kit consists of various components which you must identify and check as described in the following sections.

The *Nozzle Installation Kit* contains the materials listed below. Use *Figure 5* below to help identify each component.

• 2 Nozzles (if purchased)	• 2 Welding bosses	• 1 Jig	• 1 Threaded rod (1 in. diameter), washer and nut
----------------------------	--------------------	---------	---

IMPORTANT: You will need to supply eight 5/8" studs with two nuts each (for 2" 150# flanges, 2" 300# flange or 3" 150# flanges), or 3/4" studs with two nuts each (for 3", 300# flanges).


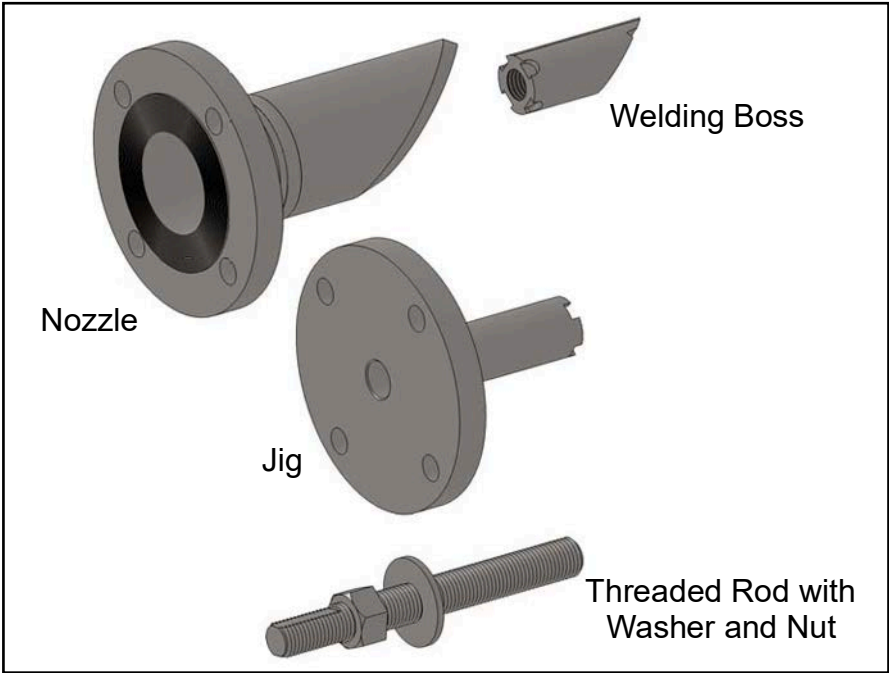


Figure 5: Components for Nozzle Installation Kit

Check the marking on the cylindrical surface of the welding boss. The pipe OD and the mounting angle are engraved on the boss as shown below.




2.3.2 Selecting and Marking the First Nozzle Location, Non-Diametrical, Mid-Radius

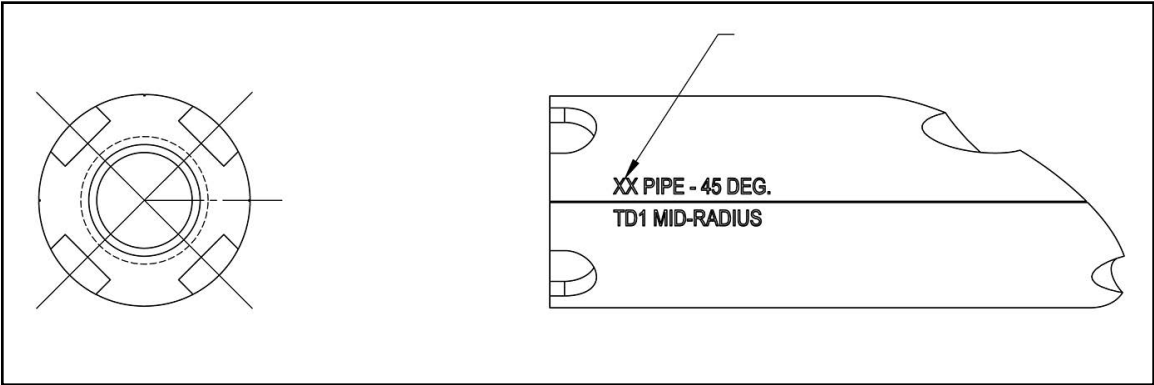

CAUTION! Correct nozzle alignment is critical to the successful operation of the flowmeter; therefore, all marking, positioning and welding operations must be carried out with the utmost attention to accuracy. Unless otherwise stated, dimensional positioning of the nozzles must be held to a tolerance of $\pm 1/16$ in. (± 1.6 mm) relative to each other and with respect to the pipe centerline. the angular tolerance must be held to $\pm 1^\circ$.

All hole cutting in process piping must be performed using hot tapping equipment.


1. For optimum performance, you should select a location that has at least 20 pipe diameters of straight, undisturbed flow upstream and 5 pipe diameters of straight, undisturbed flow downstream from the measurement point. Undisturbed flow means avoiding sources of turbulence such as valves, flanges, elbows; avoiding swirl; and avoiding disturbed flow profiles.

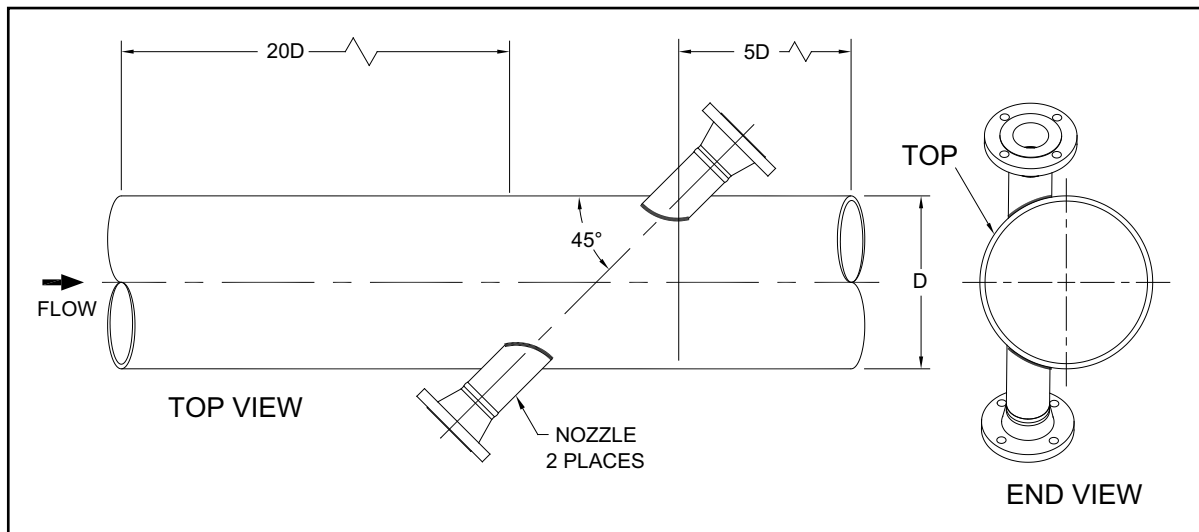

2. We recommend that you install the nozzles on a chord as near as possible to the horizontal plane for horizontal pipe.

Note: If you cannot find a proper location, please consult with Panametrics Flow Application engineering.

3. Locate the top of the pipe and put a center punch mark there as a reference mark.

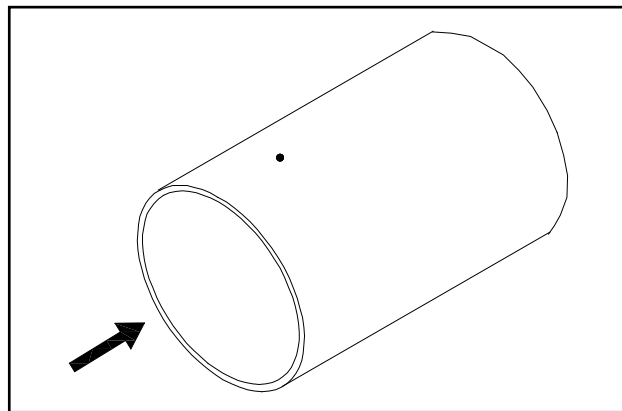

4. Calculate the position for the center of the first nozzle:

$$\frac{AS}{2} = \frac{D}{2} \times \beta$$

where

$$\beta = \text{ATAN}\left(\frac{X_o}{Y_o}\right), \text{ in radian unit}$$

$$Y_o = \left(\frac{D-2W}{2}\right) \times \left(\frac{\text{CHORD}}{\text{LOC}}\right)$$

$$X_o = \sqrt{\left(\frac{D}{2}\right)^2 - Y_o^2}$$

$$\left(\frac{\text{CHORD}}{\text{LOC}}\right) = \frac{1}{2} \text{ (for mid-radius)}$$


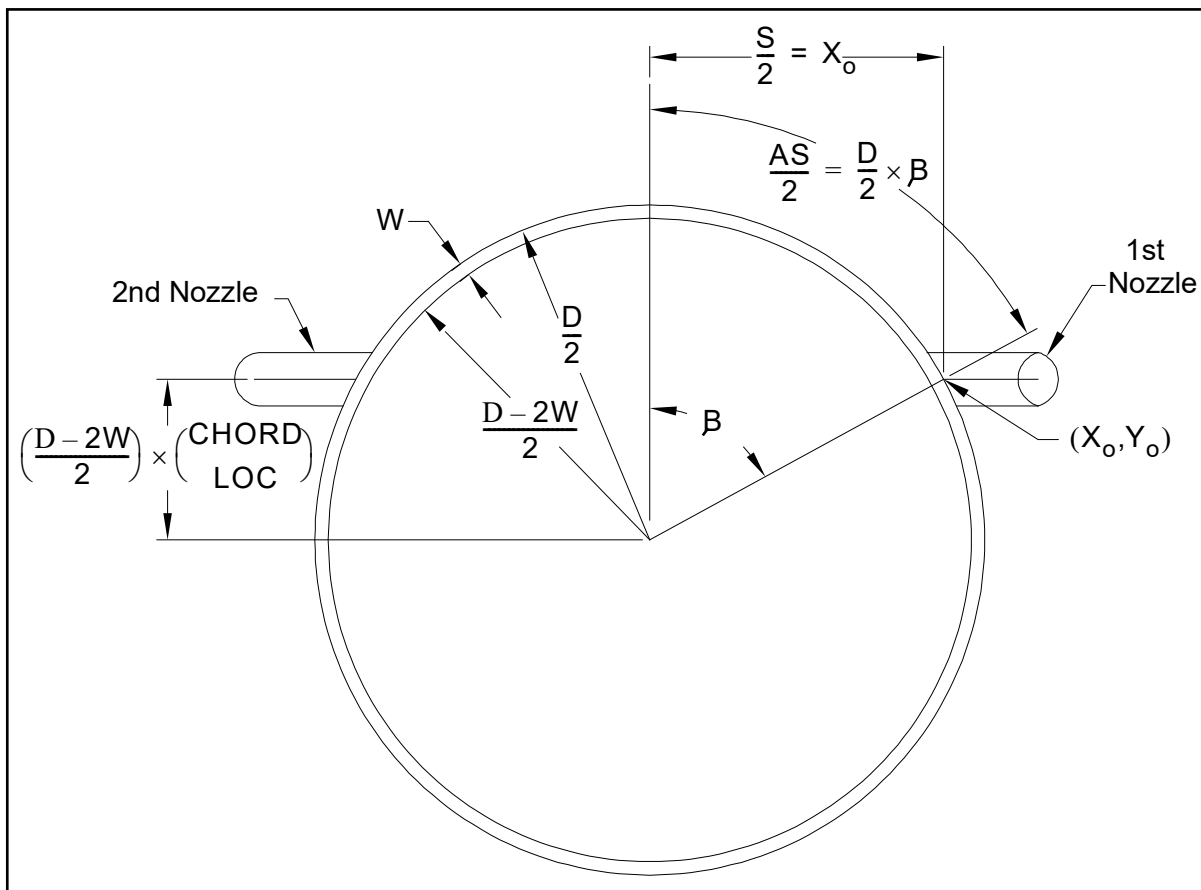



Table 2: AS/2 Values for Various Pipe Sizes with .375" Wall Thickness

Pipe		AS/2 Dimensions
NPS (DN)	O.D.	
26 in. (650mm)	26 in.	13.829 in. (351.26 mm)
28 in. (700mm)	28 in.	14.876 in. (377.86 mm)
30 in. (750mm)	30 in.	15.924 in. (404.46 mm)
32 in. (650mm)	32 in.	16.971 in. (431.06 mm)
34 in.	34 in.	18.018 in. (457.66 mm)
36 in. (900mm)	36 in.	19.065 in. (484.26 mm)
38 in.	38 in.	20.113 in. (510.86 mm)
40 in. (1000mm)	40 in.	21.160 in. (537.46 mm)
42 in. (1050mm)	42 in.	22.207 in. (564.06 mm)
44 in. (1100mm)	44 in.	23.254 in. (590.66 mm)
46 in.	46 in.	24.301 in. (617.26 mm)
48 in. (1200mm)	48 in.	25.349 in. (643.86 mm)
52 in. (1300mm)	52 in.	27.443 in. (697.06 mm)
54 in.	54 in.	28.490 in. (723.65 mm)
56 in. (1400mm)	56 in.	29.538 in. (750.25 mm)
60 in. (1500mm)	60 in.	31.632 in. (803.45 mm)
64 in. (1600mm)	64 in.	33.726 in. (856.65 mm)
66 in.	66 in.	34.774 in. (883.25 mm)

5. Using the calculated dimension AS/2 in 4, center punch the pipe to mark the position for the center of the first nozzle.

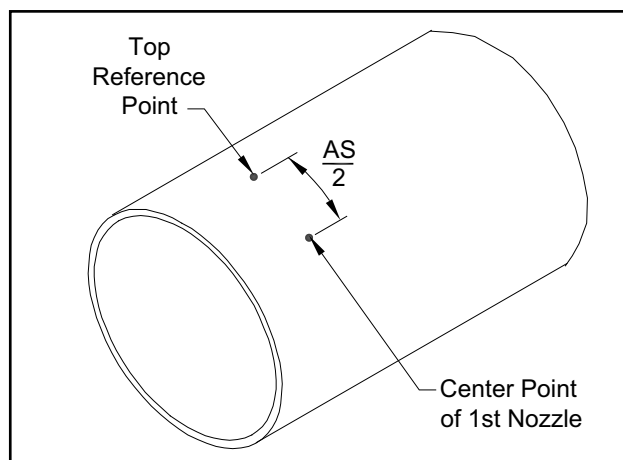


6. Spray this area with a marking dye product. Using a metal edge, scribe 6" long vertical and a horizontal lines that intersect at the center punch mark.

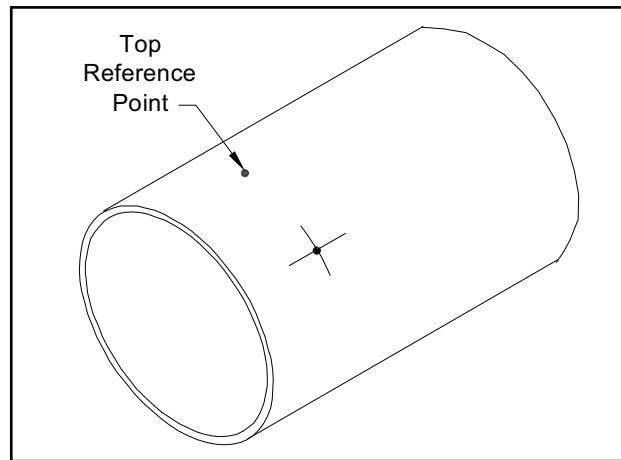


2.3.3 Determining and Marking the Second Nozzle Location, Non-Diametrical, Mid-Radius

1. The position for the second nozzle is typically a distance equal to S along the pipe and located on the other side of the pipe. For installation other than 45° , the distance is equal to S times the tangent of the installation angle. Steps 2 to 7 on the following pages are for the second nozzle located at 45° from the first nozzle.

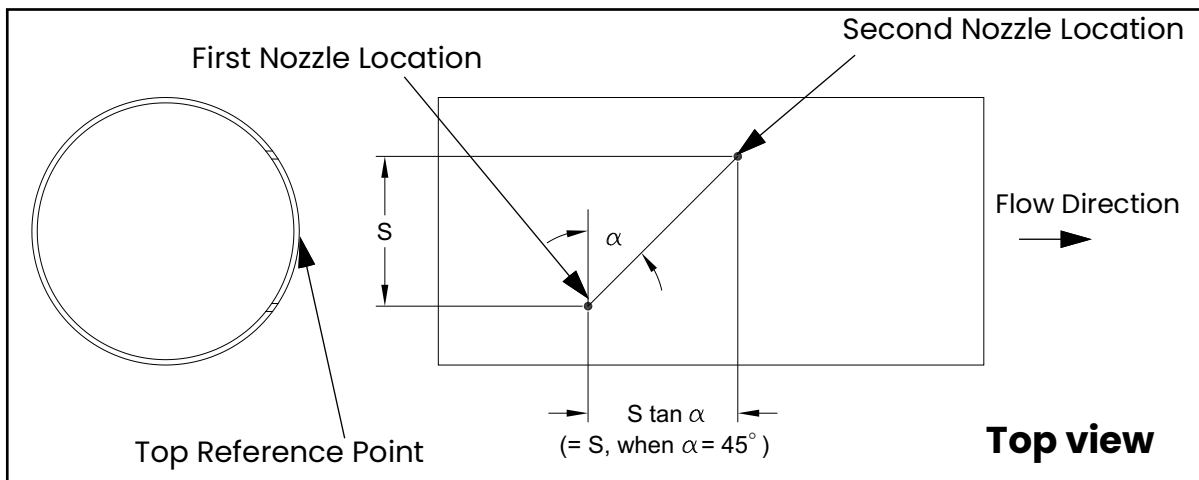

IMPORTANT: Follow the convention as depicted in the Top View above. While looking down onto the header pipe, with the flow direction from left to right, the second nozzle should be always located to the right of the first nozzle and the top reference point. The nozzles cannot be mounted on the header pipe if they are located, by mistake, at the mirror image to this convention.

2. Due to the possible variation in outside diameter of the pipe, measure the outside diameter of the pipe at four location between the nozzle centers. Calculate the average outside diameter based on these measurements.

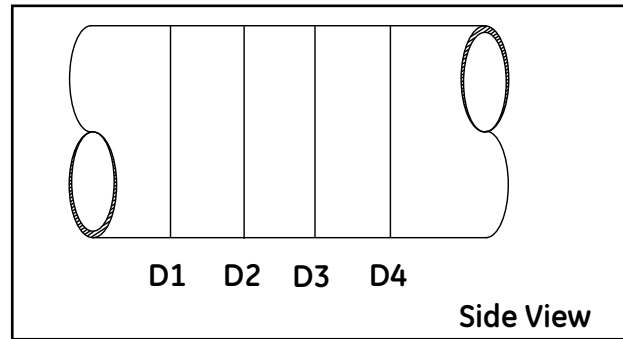

3. Using a roll of polyester film (or equivalent), cut a strip of film at the width and length as follows:

IMPORTANT: Ensure that the sides of the film are cut parallel to each other.

- Width: equal to S where $S = 2 \sqrt{\left(\frac{D}{2}\right)^2 - Y_o^2}$ with:

D = average outside diameter calculated in Step 2.

$$Y_o = \left(\frac{D - 2W}{2}\right) \times \left(\frac{\text{Chord}}{\text{Loc}}\right)$$

$$W = 0.375''$$

$$\text{Chord Location} = 0.5$$

- Length: equal to 3.5 times the outside diameter of the pipe.

Then, mark a line at a distance AS from the left edge, where $AS = D \times \beta$ with:

D = average outside diameter calculated in Step 2.


$$\beta = \text{ATAN}\left(\frac{X_0}{Y_0}\right) \text{ in radian unit}$$

$$Y_o = \left(\frac{D-2W}{2}\right) \times \left(\frac{\text{Chord}}{\text{Loc}}\right)$$


$$W = 0.375''$$

$$\text{Chord Location} = 1/2$$


$$X_0 = \sqrt{\left(\frac{D}{2}\right)^2 - Y_o^2}$$

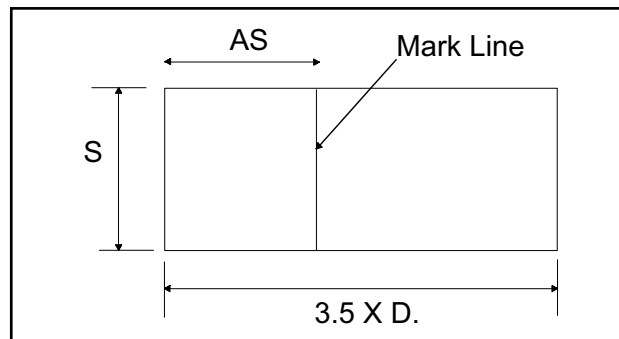


4. Wrap the strip of film around the pipe with one corner edge lined up with the vertical and horizontal scribe lines at the first nozzle location. Make sure the strip overlaps squarely around the pipe and that the marked line on the film from step 3 is on the outside and is visible.

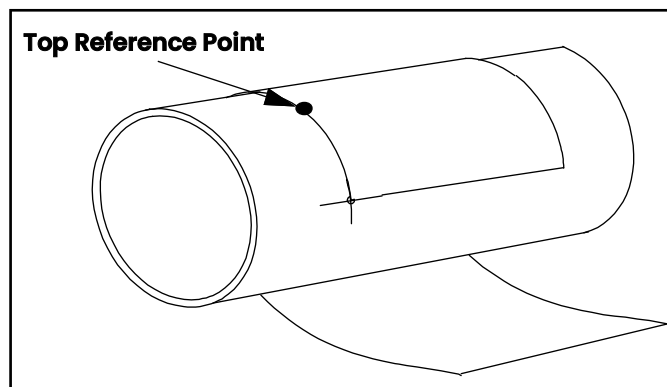

5. The new position for the center of the second nozzle is now identified as the intersection of the mark line and the second edge of the strip of film. Center punch this location prior to removing the strip of film.

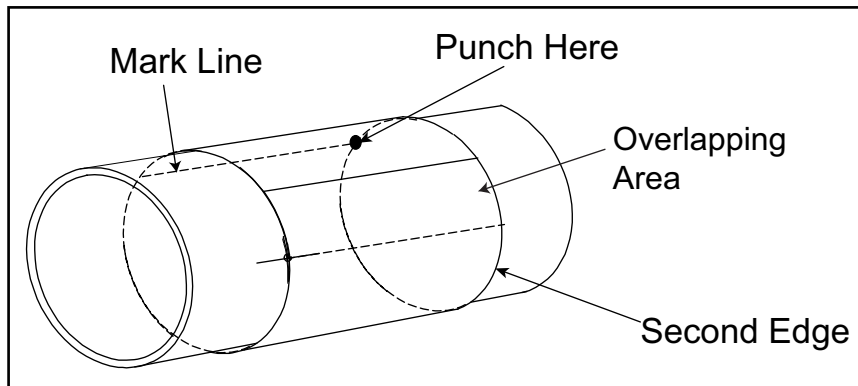

6. Remove the film.
7. Scribe 6" long vertical and horizontal lines that intersect at the center punched area.

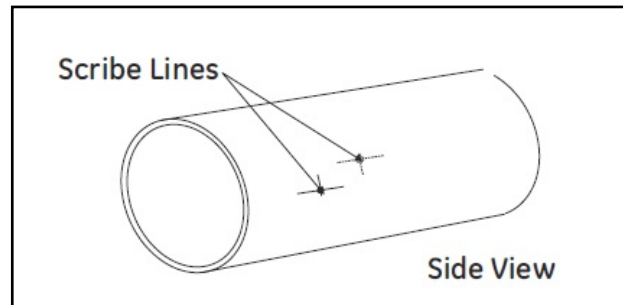

IMPORTANT: Follow the illustration closely, due to the non-symmetrical geometry of the off-diameter chord. A mirrored location of both nozzles with respect to a plane either perpendicular or parallel to the pipe in the above illustration will not accommodate the standard supplied Nozzle Installation Kit (NIK) and nozzles.

2.3.4 Installing the First Welding Boss, Non-Diametrical, Mid-Radius

1. Before welding the first boss, you must add another scribe line, known as the oblique center line. The oblique center line compensates for the slope or oblique of the boss. The oblique center line is offset from the true center (vertical) scribe line marked earlier by a distance of "X," which is dependent on the pipe outside diameter as follows:

$$X = \sqrt{\left(\frac{D}{2}\right)^2 - Y_0^2} - \sqrt{\left(\frac{D}{2}\right)^2 - Y_1^2}$$

where D = Pipe outside diameter

$$Y_0 = \left(\frac{D - 2W}{2}\right) \times (\text{chord location})$$

$$Y_1 = Y_0 + \frac{d}{2}$$

$W = 0.375$ " (default wall thickness)


Chord Location = $1/2$ (for mid radius)

$d = 1.66$ in. welding boss outside diameter


2. Scribe the oblique center line on the pipe from the horizontal line outward, at the prescribed distance from the true center line. The oblique center line should be marked on the side of the true center line that is closer to the second nozzle location. One end of the oblique line should stop at the horizontal line. s

Table 3: Values of X for Various Pipe Sizes with 0.375" Wall Thickness

Pipe		X Dimensions
NPS (DN)	O.D.	
26 in. (660 mm)	26.00 in.	0.502 in. (12.76 mm)
28 in. (710 mm)	28.00 in.	0.501 in. (12.72 mm)
30 in. (760 mm)	30.00 in.	0.499 in. (12.68 mm)
32 in. (810 mm)	32.00 in.	0.498 in. (12.65 mm)
34 in. (860 mm)	34.00 in.	0.497 in. (12.62 mm)
36 in. (910 mm)	36.00 in.	0.496 in. (12.59 mm)
38 in. (965 mm)	38.00 in.	0.495 in. (12.57 mm)
40 in. (1020 mm)	40.00 in.	0.494 in. (12.55 mm)
42 in. (1070 mm)	42.00 in.	0.493 in. (12.53 mm)
44 in. (1120 mm)	44.00 in.	0.493 in. (12.51 mm)
46 in. (1170 mm)	46.00 in.	0.492 in. (12.50 mm)
48 in. (1220 mm)	48.00 in.	0.492 in. (12.49 mm)
52 in. (1320 mm)	52.00 in.	0.491 in. (12.46 mm)
54 in. (1370 in)	54.00 in.	0.490 in. (12.45 mm)
56 in. (1420 mm)	56.00 in.	0.490 in. (12.44 mm)
60 in. (1520 mm)	60.00 in.	0.489 in. (12.42 mm)
64 in. (1625 mm)	64.00 in.	0.488 in. (12.41 mm)
66 in. (1680 mm)	66.00 in.	0.488 in. (12.40 mm)

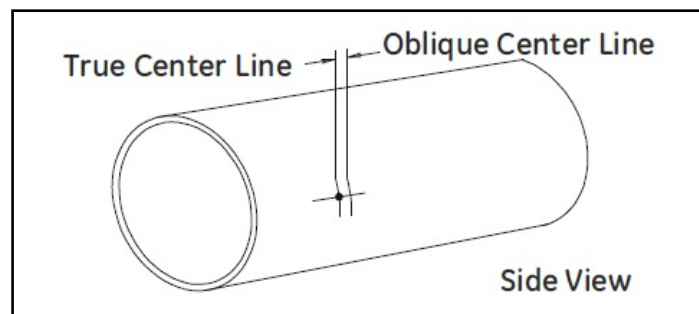

3. Position the welding boss such that the three scribe lines on the welding boss are lined up with the horizontal scribe mark and the oblique center line on the pipe. Make sure you orient the boss as shown below.

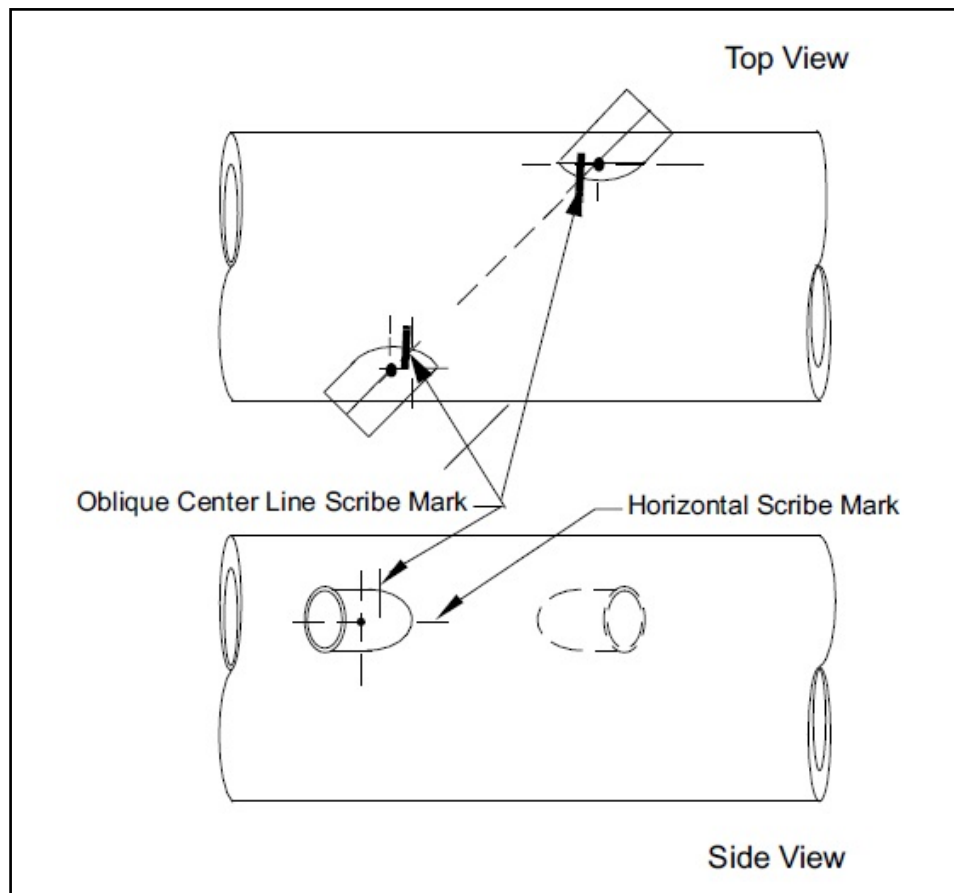


4. Clamp the boss in place using a pipe strap or equivalent so that it cannot move during tack welding.
5. Check the boss alignment, then tack weld the carbon steel boss to the pipe in each of the four grooves between the boss scribe marks.
6. Remove the clamp and check the alignment again. If the boss is misaligned by 0.02 in. (0.5 mm) or more, remove the boss, grind off the welds and reinstall it.


2.3.5 Installing the First Nozzle, Non-Diametrical Mid Radius

IMPORTANT: It is essential that the nozzle is set up and fixed in position using the jig and 1-in. threaded rod provided, prior to welding the nozzle.


1. Screw the threaded rod into a boss that is welded onto the pipe. If necessary, remove the washer and nut from the threaded rod.

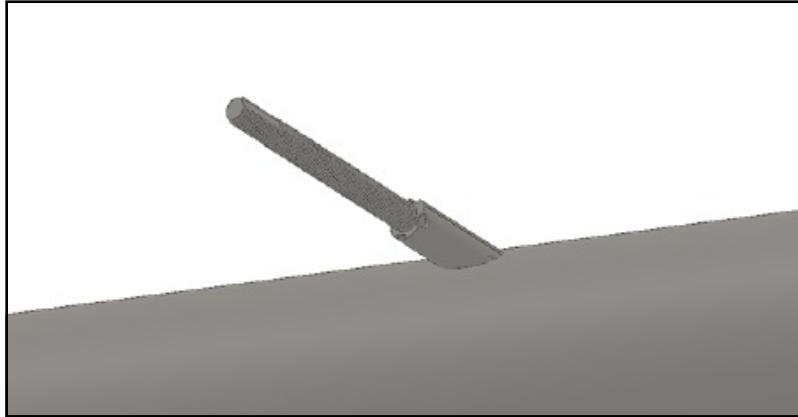

2. Slide the nozzle over the threaded rod, and align the contoured end of the nozzle so that it matches the pipe arc. Then slide the jig over the threaded rod, fitting the jig into the welding boss.

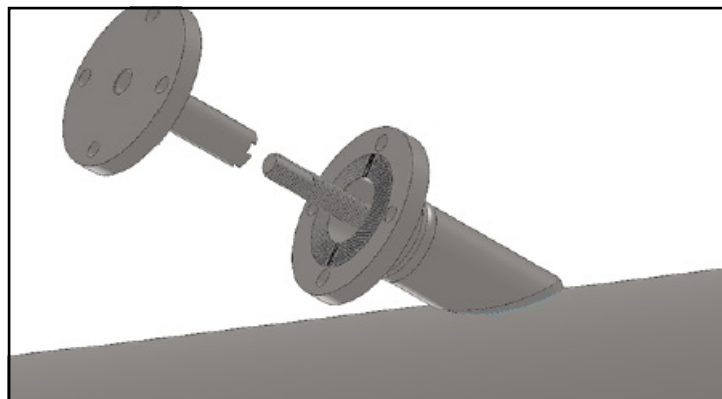

3. Align the jig and nozzle bolt holes and tighten the assembly in place, using the washer and nut.

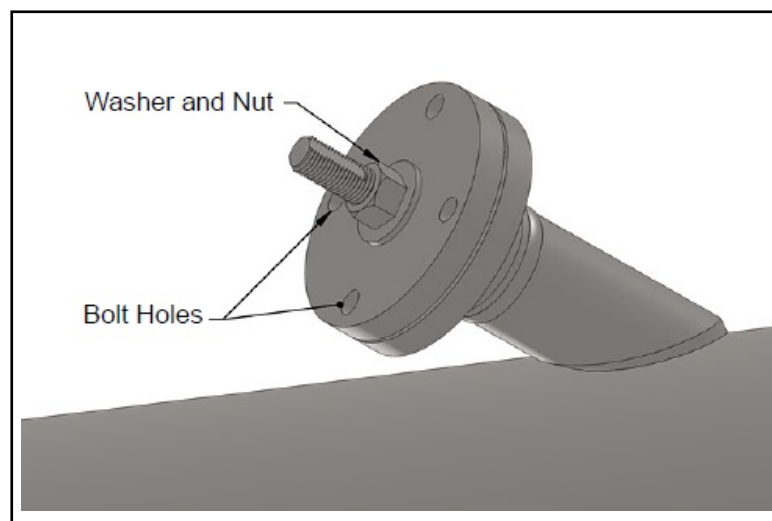

4. Install studs, nuts, and washers in the bolt holes on the flange/jig assembly and tighten the nuts.
5. The jig, boss, and nozzle combination is designed to provide a 0.094 in. (2.4 mm) root gap between the beveled edge of the nozzle and the outside diameter of the pipe. If the 0.094 in. (2.4 mm) clearance does not exist all around, the nozzle must be removed and ground appropriately to provide the required clearance. If the root gap is larger than the 0.094 in. (2.4 mm) dimension, then suitably sized washers may be inserted between the jig and the nozzle to reduce the root gap dimension.




WARNING! Only qualified personnel should weld bosses and nozzles, using a suitable ASME BPVC IX qualified welding procedure.


6. Tack weld the nozzle to the pipe at four diametrically opposed points, each tack being approximately 0.6 in. (15 mm) in length. Allow the welds to cool for 30 seconds between tacks.
7. Proceed to complete the root pass and subsequent filler passes as required.
8. Allow the welds to cool, then remove the threaded rod, washer, nut, and jig.

2.3.6 Installing the Second Welding Boss and Nozzle, Non-Diametrical Mid Radius

Install the second welding boss and nozzle at the required position as described in *Installing the First Welding Boss* and *Installing the First Nozzle*.

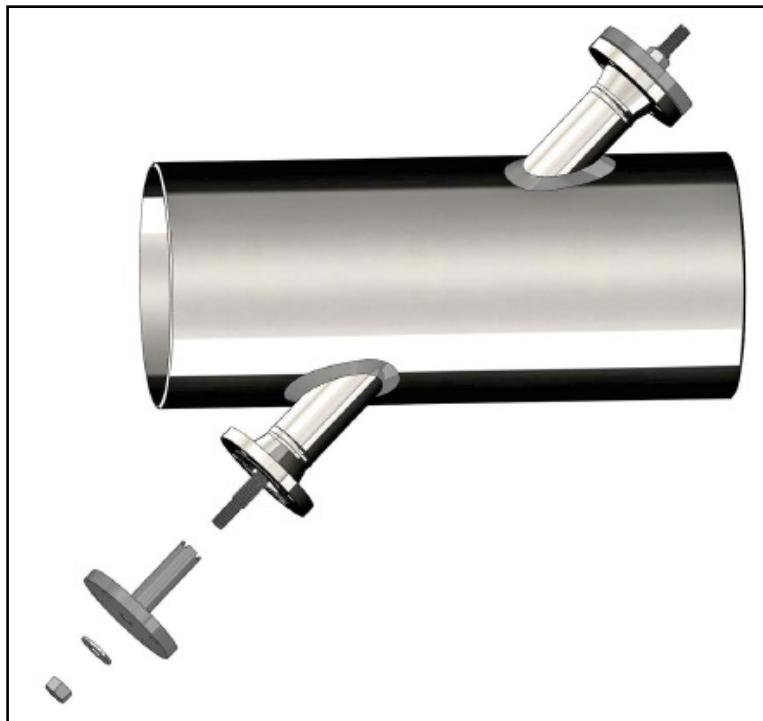

The completed installation should appear as shown below.

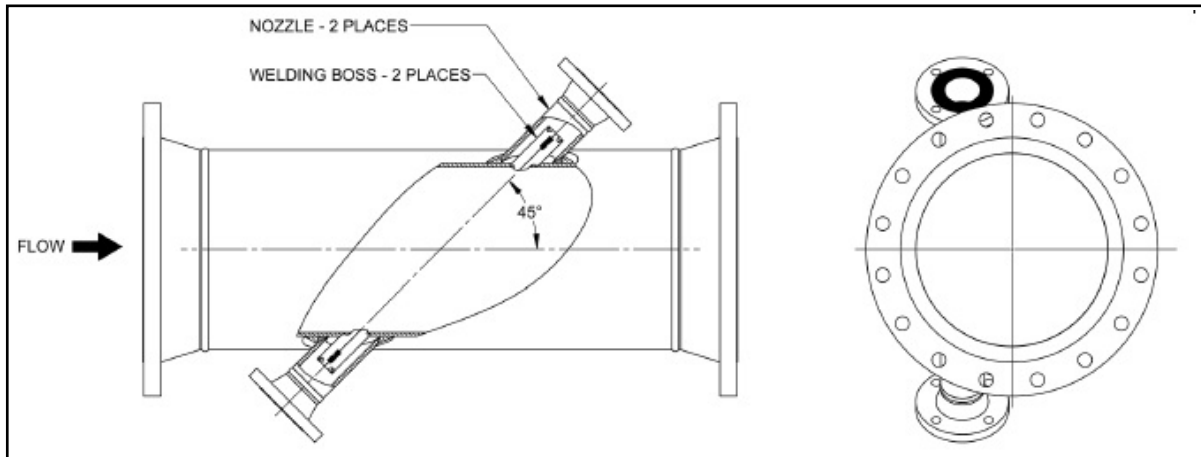

2.3.7 Hot Tapping the Pipe



WARNING! Hot tapping should be performed only by qualified personnel. Follow all applicable code and safety practices during these procedures.

For 3 in. Flanges:

1. Install 3 in. ANSI flanged isolation valves on both nozzles (full bore, 8 in. face to face for 150# RF or 11.125 in. for 300# RF) with a gasket and 5/8 in. (for 150# rated flanges) or 3/4 in. (for 300# rated flanges) diameter studs and nuts. Orient the valve handles to minimize interference.
2. Hot tap holes in the pipe using a hot tap machine equipped with a 3/4 in. (19.05 mm) drill bit. Then use a coupon retaining hole saw to cut a hole with a diameter of 2.50 in. (63.5 mm) minimum.

2.3.8 Cold Tapping the Pipe



WARNING! Cold tapping should be performed only by qualified personnel. Follow all applicable code and safety practices during these procedures.

The procedure for cold tapping a pipe is the same as the hot tapping procedure. However, an isolation valve is not necessary during the process. The hot tapping medium can be applied directly to the nozzle. Isolation valves will be added after the tapping is complete.

[no content intended for this page]

Chapter 3. Installing an Isolation Valve

Note: This chapter describes how to install an isolation valve onto a nozzle for applications using the flare gas insertion mechanism.

3.1 Diametrical or Non-Diametrical Nozzle, Valve Installation

3.1.1 For 3 inch Flanges

Refer to *Figure 6* below and install 3 inch ANSI flanged full-bore isolation valves on both nozzles (8 in. face to face for 150# RF flanges or 11.125 in. for 300# RF flanges) with a gasket and 5/8 in. (for 150# rated flanges) or 3/4 in. (for 300# rated flanges) diameter studs and nuts. Orient the valve handles to minimize interference.

Note: This installation of the isolation valves may have been accomplished already during the hot tapping operation.

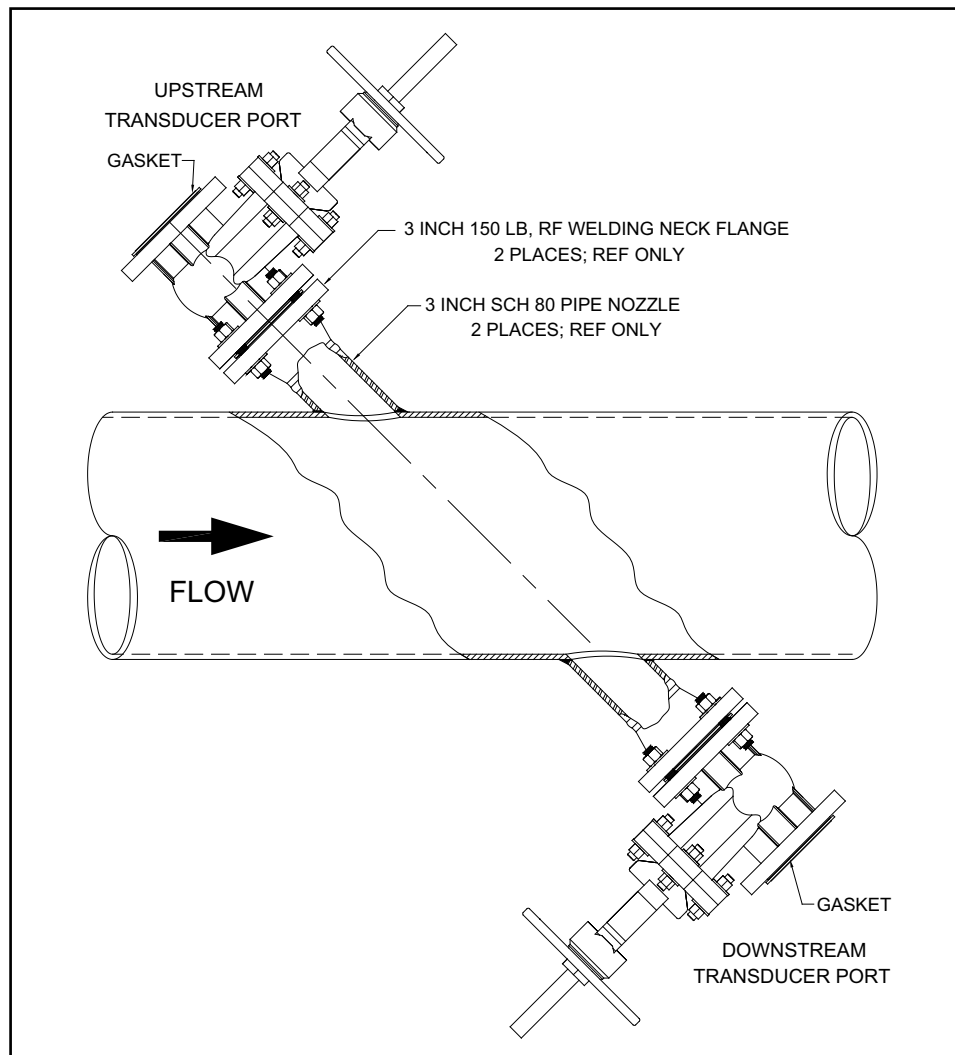


Figure 6: Installation of Isolation Valves – Standard Assembly

[no content intended for this page]

Chapter 4. Inserting T17 Transducers into the Pipe

4.1 Introduction

The T17 transducer is typically installed into a meter body. The meter body is a section of pipe that contains the ports where the transducers will be mounted. The meter body may be prefabricated or created by installing ports on the existing pipe. The T17 is inserted using a packing gland-based, low-pressure insertion mechanism.

4.2 Inserting Transducers Using the Insertion Mechanism

The *Insertion Mechanism* is designed for manual (non-assisted) transducer insertion into operating or pressurized pipes. Before inserting the mechanism, you must have isolation valves mounted to nozzles in the meter body.

Inserting the transducers into the pipe consists of the following:

- Preparing for Installation
- Mounting the Insertion Mechanism
- Inserting the Transducer into the Pipe
- Aligning the Transducers



WARNING! The manual insertion mechanism system is for low-pressure applications (80 psig/5.5Bar or less). Use the appropriate safety precautions when inserting or withdrawing the insertion mechanism.

4.2.1 Preparing for Installation

Before you begin, you should find an area where you can place the insertion mechanism upright without placing any weight on the transducer (e.g., a bench with a cutout large enough to slide the transducer through).

You will need the following items for installation:

- A packing tool (may be shipped with the electronics)
- A gasket to place on the isolation valve
- A straight edge ruler/scale
- A tag to place on the isolation valve
- Bolts

4.2.2 Mounting the Insertion Mechanism

1. Before mounting the mechanism on the isolation valve, refer to *Figure 7* below to familiarize yourself with its components:

- junction box
- barrel
- packing gland
- transducer

Note: Explosion-proof boxes may not be mounted on the end of a transducer during shipment.

IMPORTANT: For an extended range operation meter, the upstream and downstream transducers are different, and it is crucial to the meter operation that the correct transducer be installed in the correct location. The upstream transducer has a 180° head, the downstream transducer has a 6° offset, or 174° head, and the insertion mechanism and transducer have alignment marks.


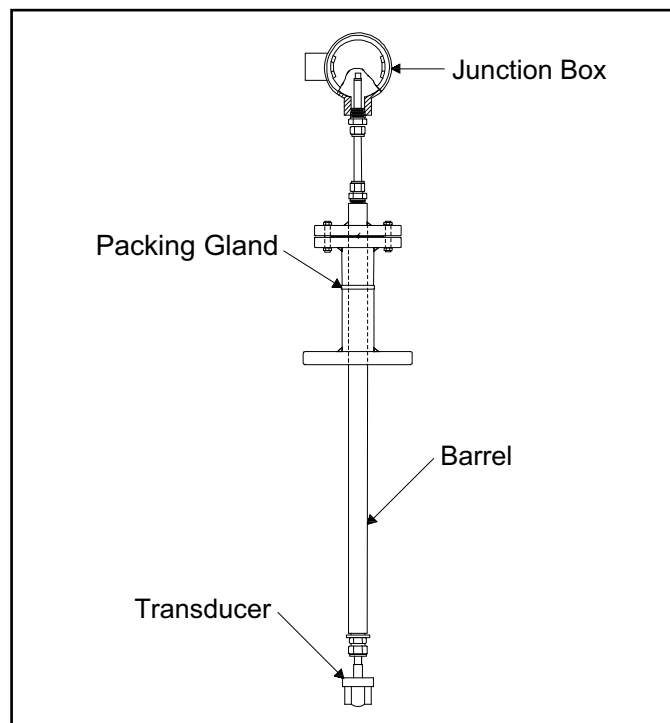


Figure 7: Insertion Mechanism Assembly with T17 Transducer

2. Visually inspect the transducer to make sure the top Swagelok® fitting is not loose.


IMPORTANT: The stop ring at the end of the barrel is supposed to be loose. **DO NOT** tighten the Swagelok® fitting or you could change the transducer alignment.

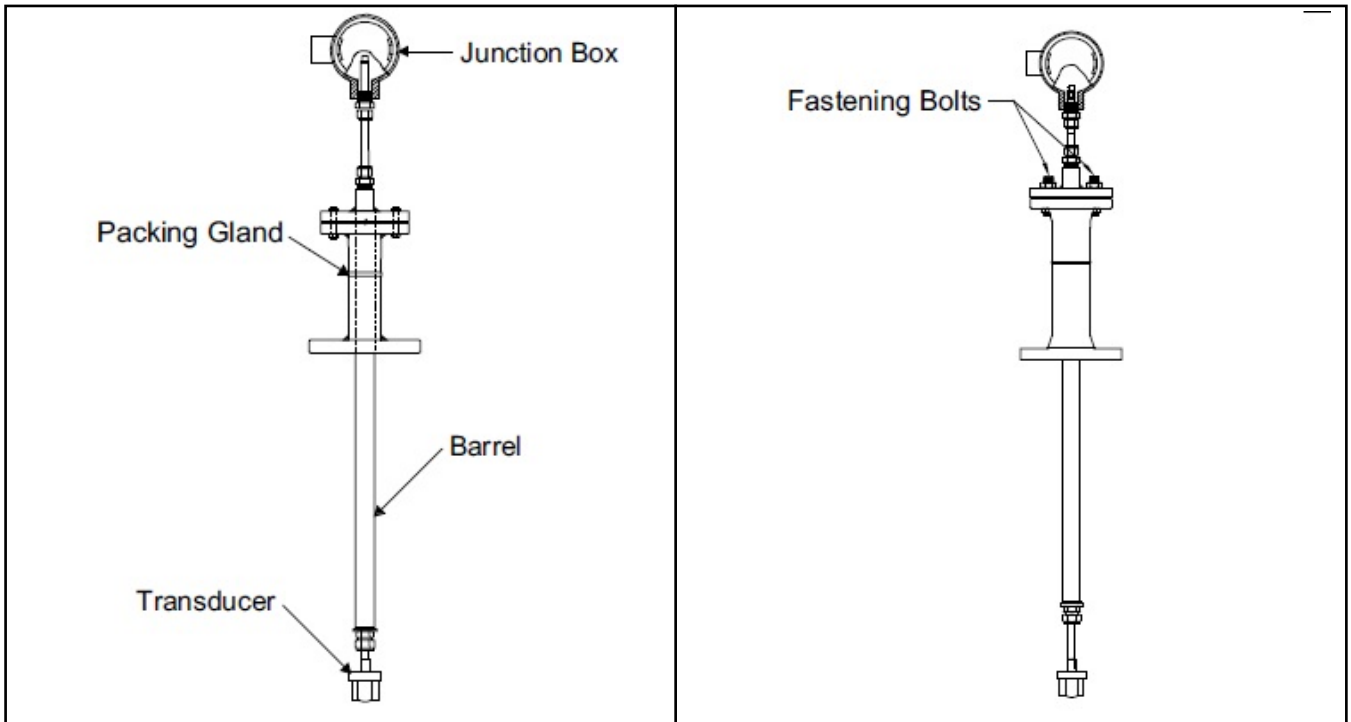

3. Remove the four bolts that fasten the barrel to the packing gland.


Note: Swagelok® is a registered trademark of the Swagelok Company.

4. Retract the barrel from the packing gland so that the transducer head is recessed in the packing gland. You will hear the stop ring click when the transducer is fully recessed.

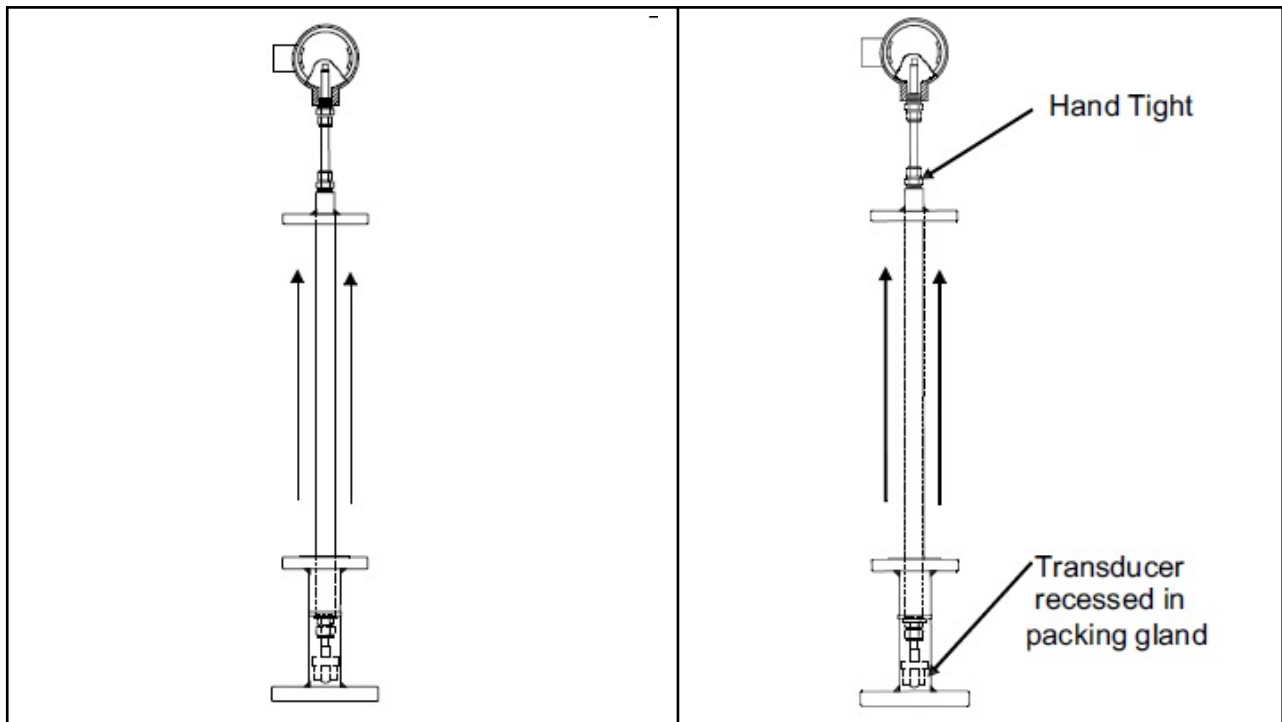


5. Visually inspect the mechanism to make sure the transducer is recessed in the packing gland. Again, make sure the top Swagelok® fitting is secure and hand tight.

6. Lift the gasket and insert the packing tool into the packing nut. Turning the packing tool clockwise, tighten the packing material so that the barrel stays up without support.

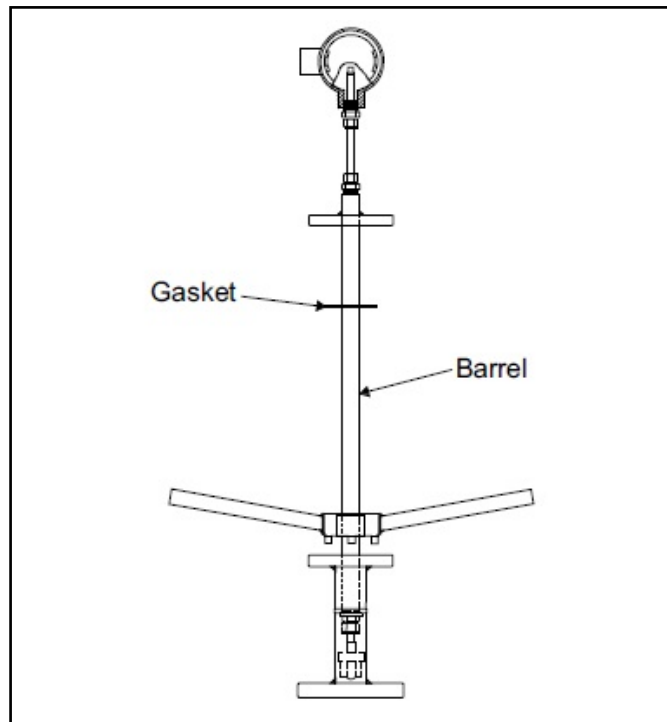

7. Place a gasket on the isolation valve.

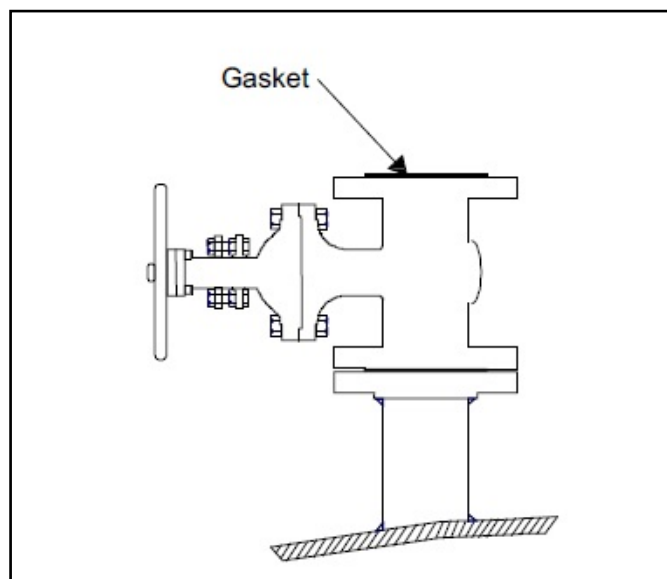


8. Identify the upstream and downstream transducer assemblies.

For *Standard Velocity Range* applications, the upstream and downstream nozzle designations are interchangeable. The system is bi-directional.


For *Extended Velocity Range* applications, the system is not bi-directional. Note which valve is designated upstream and downstream on the pipe. Identify the upstream and downstream insertion mechanism assemblies. The downstream assembly is labeled with an alignment mark on the *Barrel flange*, and an associated scribe line on the *transducer tube* near the connector end (see the figure below).

The downstream transducer head is angled 6° and must face into the flow.

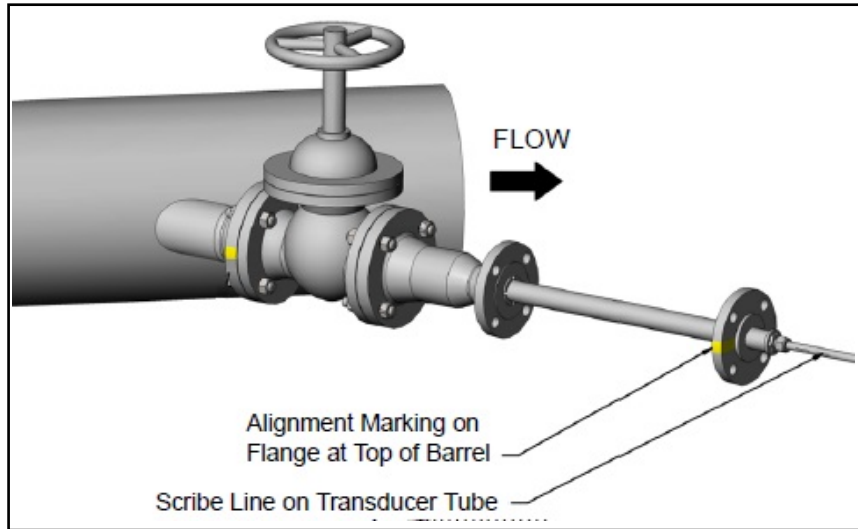

9. Proceed with either the upstream or downstream assembly.

- 10.** Lift the insertion mechanism by the barrel and place the insertion mechanism on the isolation valve.

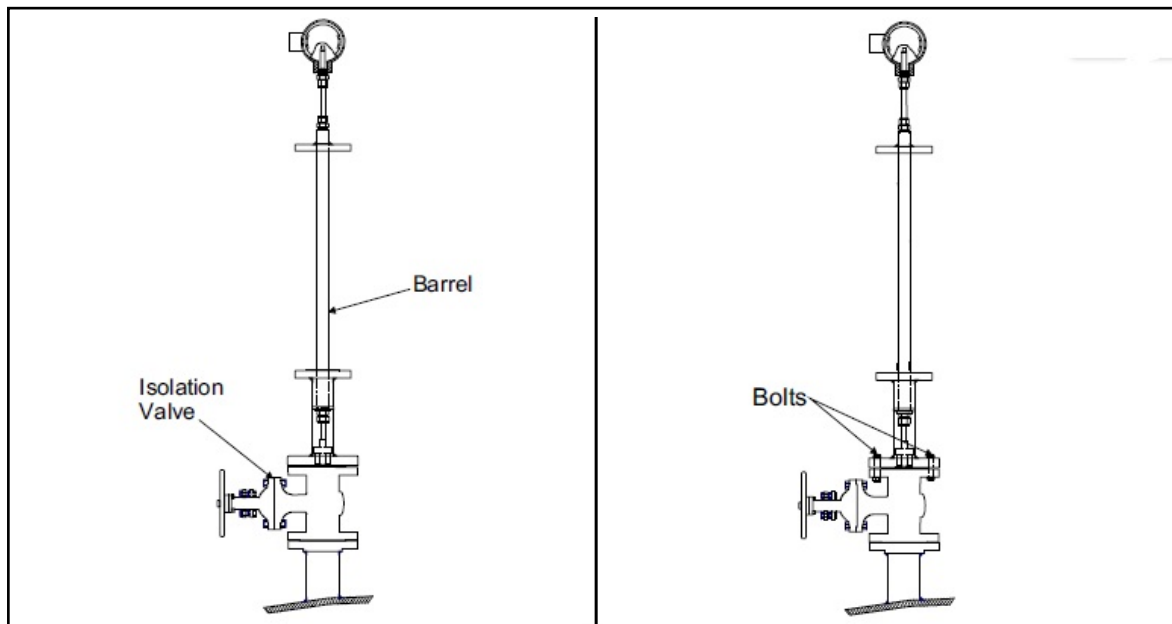


- 11.** Line up the flange holes and bolt the packing gland to the isolation valve.

12. Using the packing tool, tighten the packing nut again until the nut is recessed.



WARNING! The packing material must be securely packed before the isolation valve is opened.

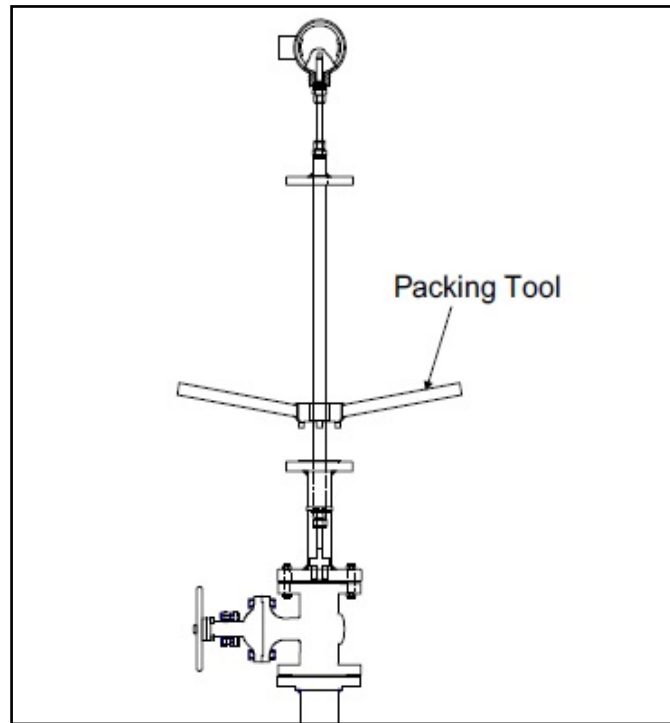

4.2.3 Aligning the Downstream Transducer for Extended Range Installations

For extended velocity range applications, the head of the downstream transducer is angled at 6° so that it points upstream (into the flow) by 6° . This allows the ultrasonic signal to be pushed into alignment at very high flow rates. At low flow rates, the beam is wide enough to tolerate the initial 6° misalignment.

Note: Only the downstream transducer flange alignment is crucial to the functionality of the meter. For installation of the upstream transducer, see “Mounting the Insertion Mechanism” on Section 4.2.2.

Note: This step of the installation requires two people. One person should support the barrel and one person should operate the alignment fixture.


Note: Although the images in this section do not show the gasket referenced in “Preparing for Installation” on Section 4.2.1, that gasket is crucial to sealing the assembly.

1. Locate the supplied alignment tool shown below (part number 568-120). This tool is used to check and possibly fine-tune the alignment by rotating the Barrel assembly prior to final tightening of the mounting nuts and studs.


Note: Although this process ensures optimum performance, it is not required for proper operation.




2. Find the scribe line on the downstream transducer tube near the transducer end with the BNC connector. This scribe line indicates the direction of the angled transducer head. Verify by direct observation that the scribe line on the transducer lines up with the alignment marking on the flange at the top of the Barrel. If it does not, contact Panametrics for assistance.
3. The primary method for ensuring that the angled transducer head is pointing in the correct direction uses the alignment marks on the downstream nozzle and the downstream Barrel assembly (see the figure below). The alignment marking on the flange at the top of the Barrel must be in alignment with the nozzle, such that the marking falls between the bolt holes straddling the upstream to downstream centerline, as shown below.

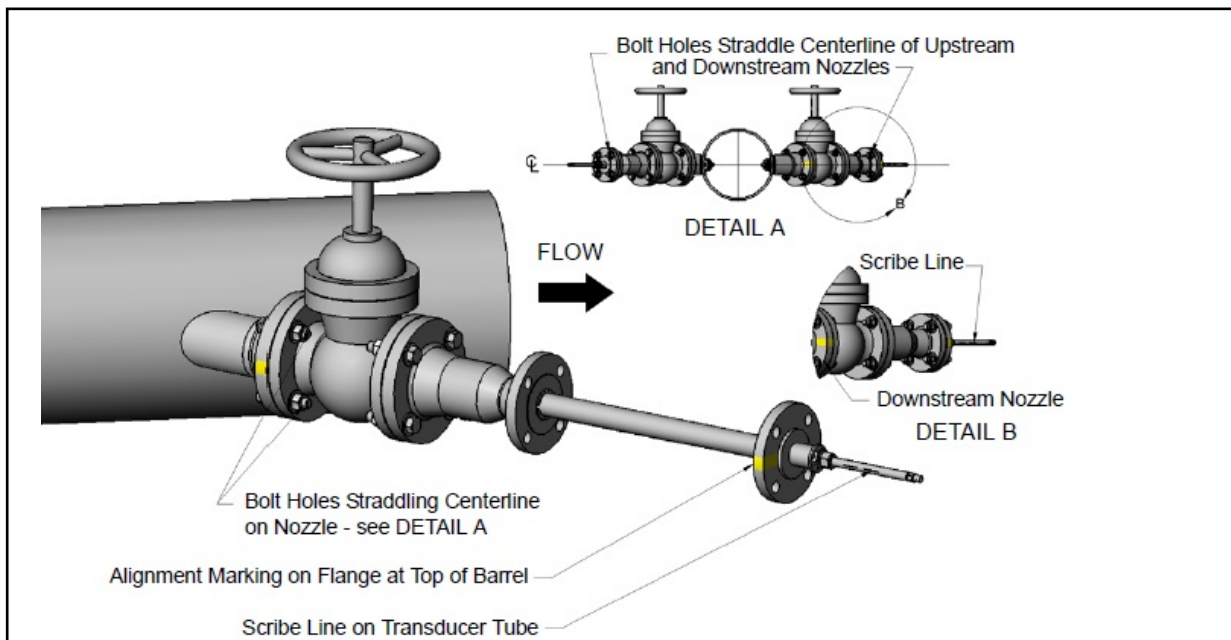


4. Before proceeding, verify that the valve and insertion mechanism are fully bolted in place. Each stud should extend far enough beyond its nut to allow the alignment tool to rest on the stud. Fit the alignment fixture over the nozzle studs so that the two studs straddling the centerline on the nozzle are inserted into the holes on the fixture of the corresponding flange size and rating (3", 150# or 300#).

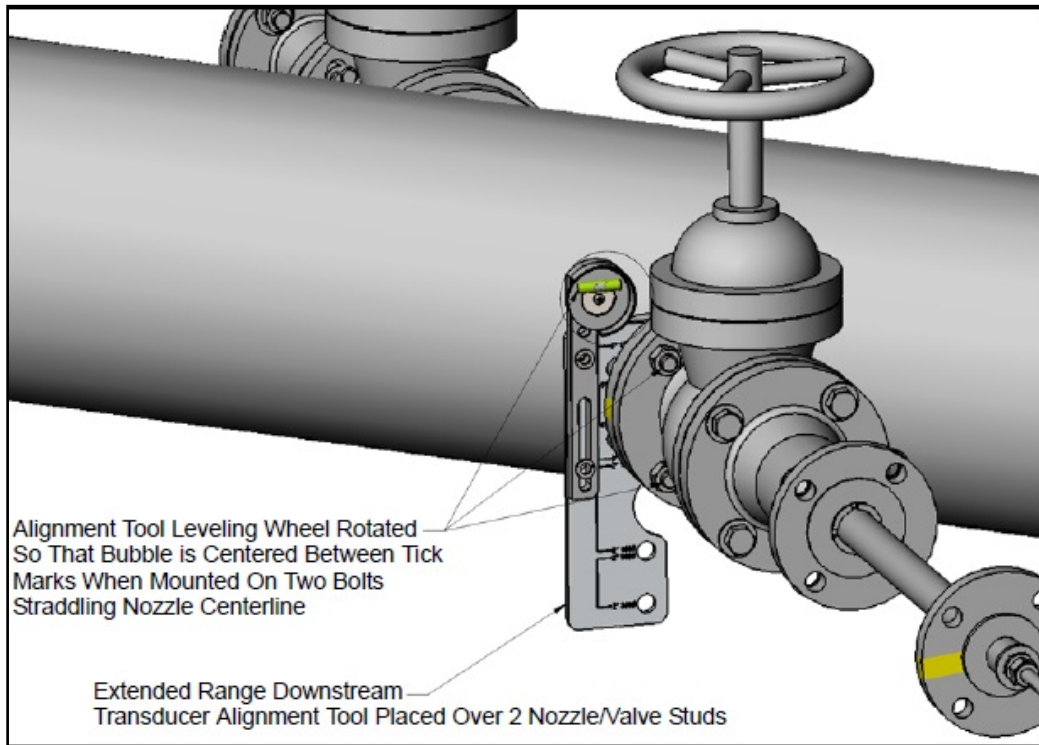

5. Adjust the leveling wheel so that the bubble in the level is centered between the two tick marks on the vial.

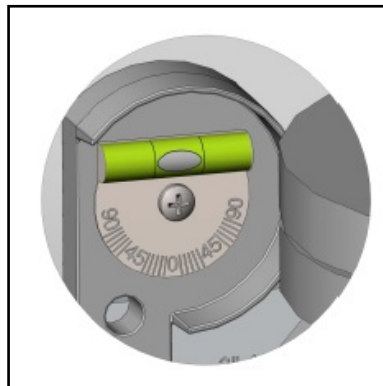

6. Remove the alignment fixture from nozzle studs.
7. Place two sets of studs, washers and nuts into the flange at the top of barrel assembly, straddling the alignment mark. Nuts and washers should not be installed on the side of the flange with the serrated raised face.
8. Place the alignment fixture over the two studs in the flange at the top of the barrel assembly, and rotate the barrel flange until the bubble aligns between the tick marks on the vial. Slowly press the flange toward the insertion mechanism flange until the gasket and raised faces of both flanges are mated. The studs should also engage the holes in the insertion mechanism flange. If desired, the barrel flange can be rotated slightly to maintain the bubble alignment on the gauge.

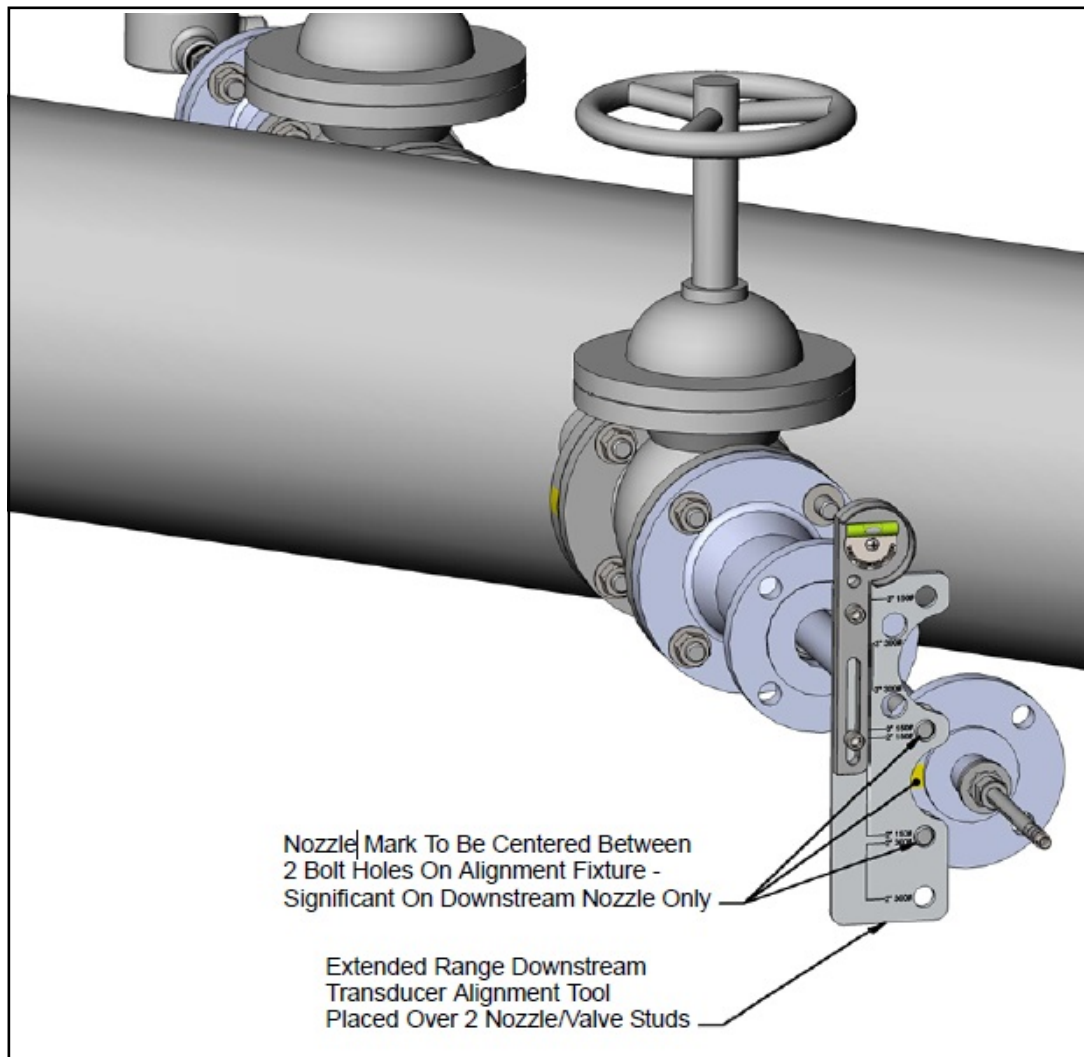

9. Remove the fixture and install the remaining studs, washers, and nuts. Tighten them to the correct torque.
10. Place a tag on the isolation valve stating the following:
**DO NOT OPERATE (CLOSE) WHEN
TRANSDUCER IS INSERTED INTO PIPE.**
11. Refer to the flowmeter *Startup Guide* to make the transducer electrical connections.

4.3 Connecting an XAMP

This section explains how to correctly install and assemble an **XAMP** into a transducer junction box. Although one type of junction box is used as an example in the steps below, the procedure applies to all three possible junction box options.

1. Place a 3/4" NPT compression fitting on the stem of the transducer closer to the BNC end.
2. Torque the fitting into one of the 3/4" NPT ports of the junction box, with at least five threads engaged. After the fitting is torqued into place, ensure that the BNC head of the transducer extends slightly past the ground screw bosses as shown in *Figure 8* below:

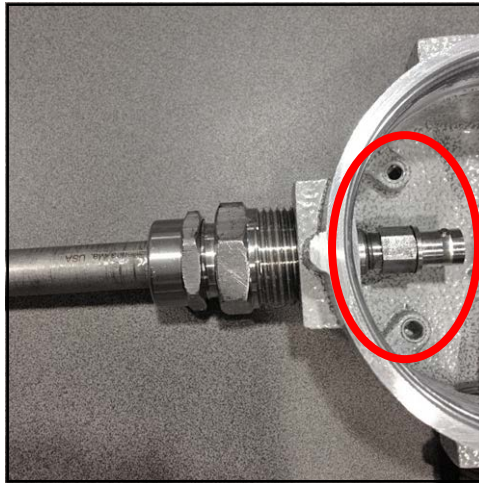


Figure 8: Torquing Reducer into NPT Port

3. If the BNC head extends too far into the junction box, it will make the assembly more difficult by reducing the amount of area available to properly store the excess cable. If the BNC head is not positioned approximately where it is pictured in the image above, loosen the compression fitting and adjust the transducer. Then, re-tighten the compression fitting after this is completed.
4. Torque the cable gland coming from the electronics main housing into the other 3/4" NPT port until there are at least five threads of engagement (see *Figure 9* below).



Figure 9: Torquing the Cable Gland

With the transducer and the cable gland assembled, the junction box should now look like *Figure 10* below:



Figure 10: Assembled Transducer and Cable Gland

5. First, connect the right-angle male BNC plug to the exposed BNC cable from the cable gland assembly, as shown in *Figure 11* below.



Figure 11: Connecting BNC Plug to Cable

6. Connect the female BNC plug of the XAMP to the male BNC transducer head, as shown in *Figure 12* below:



Figure 12: Female Plug to Male BNC Head

7. Wrap the extra length of cable around the perimeter of the junction box such that the BNC heads do not rest on other cables or on each other. An image of this is shown in *Figure 13* below.



Figure 13: BNC Heads

8. Place the **XAMP** body into the junction box (see *Figure 14* below), resting the puck gently on the cables below it. Ensure that the cables of the **XAMP** rest naturally according to the slant at which they exit the epoxy, to reduce stress and strain on the joint. The **XAMP** should remain still, and the cap of the junction box should rotate freely around the **XAMP**.



Figure 14: Junction Box Cap

9. Place the cover of the junction box over top of the **XAMP** and tighten the cover until the unit is closed and secure. Engage the set screw to discourage tampering or removal (see *Figure 15* below).



Figure 15: Set Screw of Junction Box

Note: To disconnect or uninstall the XAMP from the assembly, just reverse the procedures above.

[no content intended for this page]

Chapter 5. Maintaining the T17 Transducers

5.1 Removing Transducers

After the transducers are properly installed into the pipe nozzles as described in *Chapter 4. "Inserting T17 Transducers into the Pipe"*, the T17 transducers require no additional adjustments.

Periodic inspection of the installation to verify the torque on the mounting bolts may be required, if erratic flow rate measurements are observed.

If you suspect something is wrong with a transducer or need to replace a transducer, use the removal procedure that follows.

5.1.1 Using the Insertion Mechanism

Use the steps below to remove transducers that have been installed with the insertion mechanism:




WARNING! Follow all applicable safety codes while performing the following procedures.

1. Disconnect power from the flowmeter.




WARNING! Make sure the power is disconnected before performing the following steps.

2. Disconnect the transducer cables at the junction box.
3. On the insertion mechanism, remove the bolts that fasten the barrel flange to the packing gland flange.

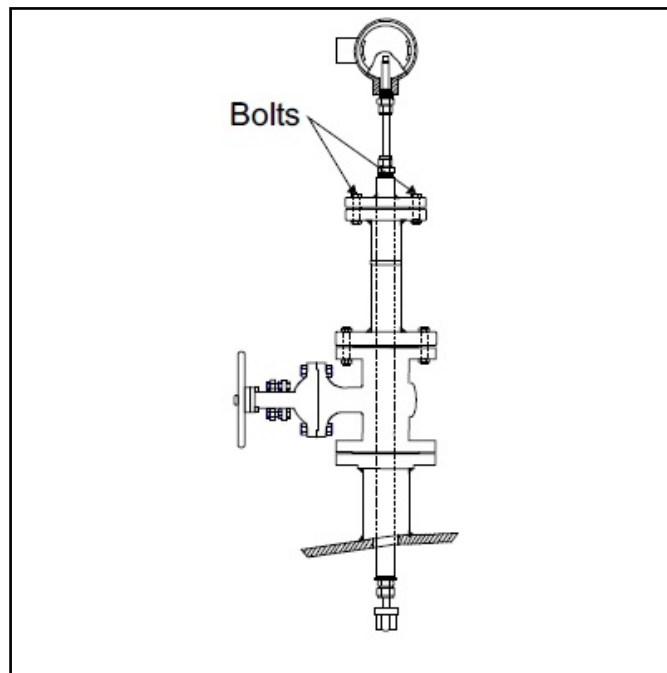

4. Retract the barrel from the packing gland until the transducer head is recessed in the packing gland. The stop ring will “click” when the transducer is fully recessed.

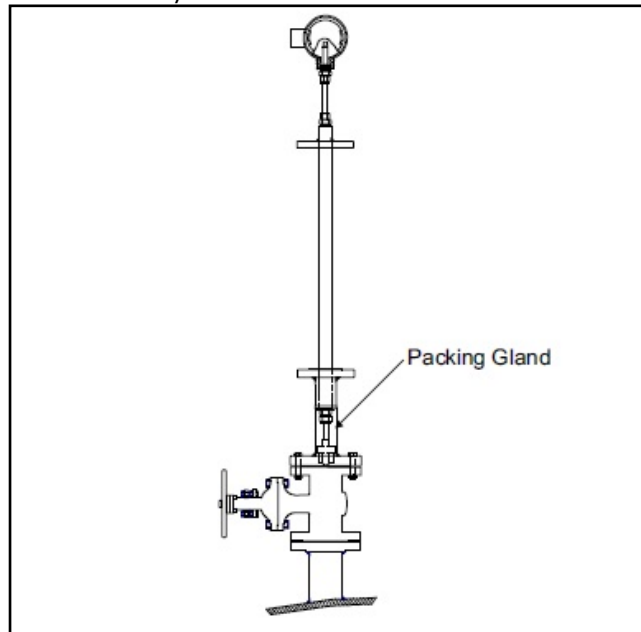


5. CLOSE THE ISOLATION VALVE!




WARNING! Make sure the isolation valve is closed before performing the following steps.

6. After closing the isolation valve, remove the bolts that fasten the packing gland flange to the isolation valve flange, and lift the insertion mechanism by the barrel to remove it from the isolation valve.

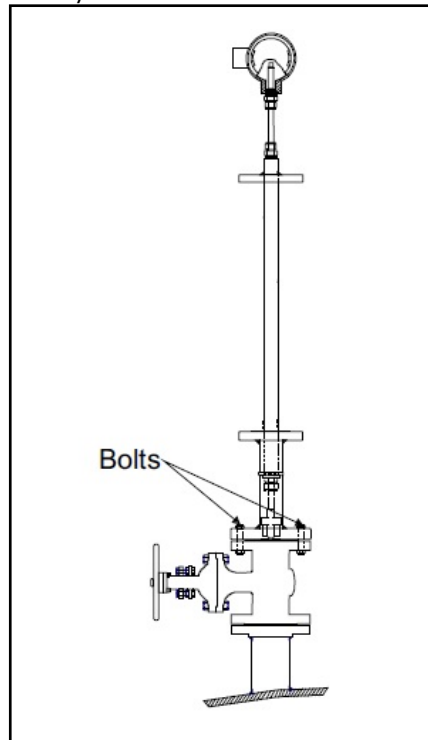

7. Install a new flange gasket on the isolation valve. Then, fasten a "blind" flange onto the isolation valve with the bolts removed in the previous step.

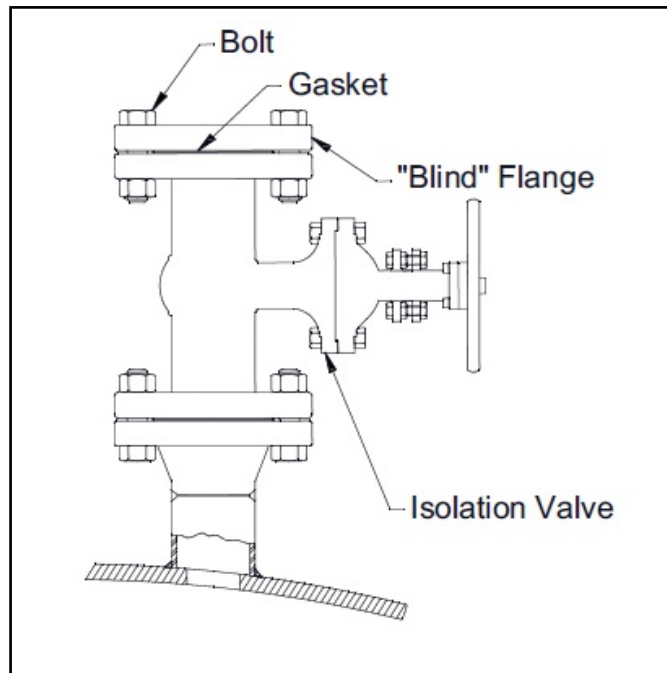

8. Disconnect the junction box on the end of the transducer by loosening the compression fitting.
9. Repeat steps 4 through 9 for the other transducer.

[no content intended for this page]

Chapter 6. Specifications

6.1 T17 Transducer Physical Specifications

Applications:	Hazardous Area, Flare Gas, Hydrocarbon Gases, Saturated Steam
Installation Type:	Wetted Standard: Titanium
Material:	<i>Optional: 316 Stainless Steel, Monel® or Hastelloy®</i>
Field Mounting:	Flowcell, Hot or Cold Tap
Process Connection:	Flanged, 3 in. (80 mm)
Holder Type:	Insertion Mechanism
Holder Ratings:	150#, 300#, 600# Standard: 100 kHz
Operating Frequency:	Optional: 50 kHz and 200 kHz
Pressure Range:	0 to 2700 psig Standard, 0 to 1500 psig for USA/Canada Certified Products
Electrical Rating:	200 V peak-to-peak, 5 mA
Ambient Temperature Range:	-40° to +140°F (-40° to +60°C)
Process Temperature Range:	-364° to +572°F (-220° to +300°C) -55°C to 150°C for T5 Max Only

6.2 T17 Transducer Certifications

North American - Explosion proof:		Class I, Division 1, Group B, C, D
European/International Flameproof:		II 2 G Ex db IIC T6...XX Gb (T code dependent on Process Temperature) Tamb -40° to +140°F (-40° to +60°C)
North American - Weatherproof:		IP66, TYPE 4X 200Vpp, 5mA
European/International - Weatherproof:	IP 66 	

6.3 Special Conditions of Use

Consult the manufacturer if dimensional information on the flameproof joints is necessary.

It is end-user's responsibility to ensure that the ambient around the T17 assembly does not exceed the permitted ambient of -40°C to +60°C, regardless of process temperature.

The T17 transducers made of titanium (where ff = Ti) are potential ignitions sources when subjected to impact or friction, which shall be taken into consideration during installation.

The T17 have non-conducting coating which may generate an ignition-capable level of electrostatic charge under certain extreme conditions. The user shall take the necessary precautions to minimize the risk from electrostatic discharge. For example, controlling the environmental humidity where installed in order to minimize generation of static electricity, with the equipment protected from direct airflow which could cause a transfer of charge to the surface of the equipment. Cleaning should be done only with a damp cloth.

The temperature classification rating of the T17 assemblies is dependent upon the maximum process temperature (see table below).

Table 4: Temperature Classification Rating of the T17

Model (where aa = T17)	Process temperature	T-Class
aa-bb-cc-dd-LT-ff-gg-hh-ii-jj-zz	-220°C to +85°C	T6
	+85°C to +100°C	T5
aa-bb-cc-dd-NT-ff-gg-hh-ii-jj-zz	-55°C to +85°C	T6
	+86°C to +100°C	T5
	+101°C to +135°C	T4
	+136°C to +150°C	T3
aa-bb-cc-dd-HT-ff-gg-hh-ii-jj-zz	-50°C to 85°C	T6
	+86°C to +100°C	T5
	+101°C to +135°C	T4
	+136°C to +200°C	T3
	+201°C to +250°C	T2
aa-bb-cc-dd-XT-ff-gg-hh-ii-jj-zz	-180°C to 85°C	T6
	+86°C to +100°C	T5
	+101°C to +135°C	T4
	+136°C to +200°C	T3
	+201°C to +300°C	T2



Scan here or use the link below for
Customer Service, Technical Support,
or Service Information:

panametrics.com/support

Copyright 2026 by Panametrics LLC. ALL RIGHTS
RESERVED. This material contains one or more
registered trademarks of Panametrics LLC and/or its
subsidiaries. All third-party products and company
names are trademarks of their respective holders.

PANA048C21 EN G (07/2026)

 **Panametrics**
panametrics.com